



PROVEEDORA
FIARE



CATALOGO







FILTROS DE ACEITE ECOLOGICOS





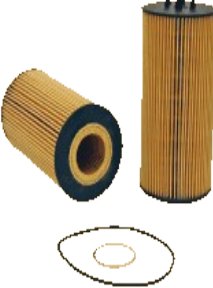


	<p>159 06 V6 3.2L BRERA 07-11 V6 3.2L SPIDER 06-18 V6 3.2L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>57090</td></tr> <tr><td>PROTEC</td><td>176</td></tr> <tr><td>FRAM</td><td>CH8765</td></tr> <tr><td>GONHER</td><td>G765</td></tr> <tr><td>MANN</td><td></td></tr> <tr><td>INTERFIL</td><td>OF8765</td></tr> <tr><td>ALTURA</td><td>98mm</td></tr> <tr><td>D.EXTERNO</td><td>53mm</td></tr> <tr><td>D.INTERNO</td><td>20MM</td></tr> </tbody> </table>	WIX	57090	PROTEC	176	FRAM	CH8765	GONHER	G765	MANN		INTERFIL	OF8765	ALTURA	98mm	D.EXTERNO	53mm	D.INTERNO	20MM
WIX	57090																			
PROTEC	176																			
FRAM	CH8765																			
GONHER	G765																			
MANN																				
INTERFIL	OF8765																			
ALTURA	98mm																			
D.EXTERNO	53mm																			
D.INTERNO	20MM																			
	<p>159 05-12 L4 1.9L 2.2L V6 3.2L BRERA 06 L4 2.2L SPIDER 06 L4 2.2L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>57082</td></tr> <tr><td>PROTEC</td><td>182</td></tr> <tr><td>FRAM</td><td>CH9018</td></tr> <tr><td>GONHER</td><td>G49</td></tr> <tr><td>MANN</td><td>ML1015</td></tr> <tr><td>INTERFIL</td><td>OF9018</td></tr> <tr><td>ALTURA</td><td>89mm</td></tr> <tr><td>D.EXTERNO</td><td>68mm</td></tr> <tr><td>D.INTERNO</td><td>35mm/10mm</td></tr> </tbody> </table>	WIX	57082	PROTEC	182	FRAM	CH9018	GONHER	G49	MANN	ML1015	INTERFIL	OF9018	ALTURA	89mm	D.EXTERNO	68mm	D.INTERNO	35mm/10mm
WIX	57082																			
PROTEC	182																			
FRAM	CH9018																			
GONHER	G49																			
MANN	ML1015																			
INTERFIL	OF9018																			
ALTURA	89mm																			
D.EXTERNO	68mm																			
D.INTERNO	35mm/10mm																			
	<p>MITO 09-17 L4 1.4L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>57341</td></tr> <tr><td>PROTEC</td><td>721</td></tr> <tr><td>FRAM</td><td>CH9713</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU713/1X</td></tr> <tr><td>INTERFIL</td><td>OF7300</td></tr> <tr><td>ALTURA</td><td>83mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>24mm</td></tr> </tbody> </table>	WIX	57341	PROTEC	721	FRAM	CH9713	GONHER		MANN	HU713/1X	INTERFIL	OF7300	ALTURA	83mm	D.EXTERNO	65mm	D.INTERNO	24mm
WIX	57341																			
PROTEC	721																			
FRAM	CH9713																			
GONHER																				
MANN	HU713/1X																			
INTERFIL	OF7300																			
ALTURA	83mm																			
D.EXTERNO	65mm																			
D.INTERNO	24mm																			
	<p>159 08 L4 1.9L GIULIETA 12-17 L4 1.7L MITO 08 L4 1.6L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>WL7464</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH10623</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU712/11X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>105mm</td></tr> <tr><td>D.EXTERNO</td><td>66mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>41mm/26mm</td></tr> </tbody> </table>	WIX	WL7464	PROTEC		FRAM	CH10623	GONHER		MANN	HU712/11X	INTERFIL		ALTURA	105mm	D.EXTERNO	66mm/CERRADO	D.INTERNO	41mm/26mm
WIX	WL7464																			
PROTEC																				
FRAM	CH10623																			
GONHER																				
MANN	HU712/11X																			
INTERFIL																				
ALTURA	105mm																			
D.EXTERNO	66mm/CERRADO																			
D.INTERNO	41mm/26mm																			




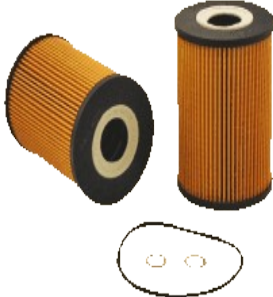
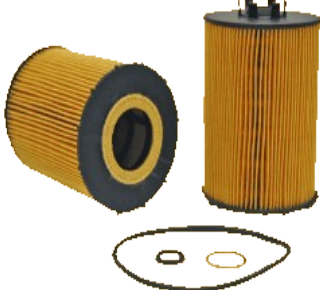


	<p>A8 00-03 V8 4.2L Q7 07-10 V6 3.6L V8 3.6L S8 01-03 V8 4.2L</p>	<p>WIX 51212 PROTEC 194 FRAM CH8158 GONHER G112 MANN HU932/6 INTERFIL OF8158</p> <hr/> <p>ALTURA 109mm D.EXTERNO 83mm D.INTERNO 21mm/38mm</p>
	<p>A4 05-14 V6 3.0L 3.2L A5 08-16 V6 3.0L 3.2L A6 05-15 V6 2.4L 2.8L 3.0L 3.2L A7 12-16 V6 3.0L A8 13-15 V6 3.0L Q5 09-17 V6 3.0L 3.2L Q7 11-16 V6 3.0L S4 10-16 V6 3.0L S5 10-17 V6 3.0L S6 10 V10 5.2L S8 10 V10 5.2L TTS 17 L4 2.0L</p>	<p>WIX 57204 PROTEC 715 FRAM CH10160 GONHER MANN HU729Z INTERFIL OF10160</p> <hr/> <p>ALTURA 155mm D.EXTERNO 65mm D.INTERNO 32mm</p>
	<p>Q3 13-15 L4 2.0L Q5 13 L4 2.0L</p>	<p>WIX 57262 PROTEC 790 FRAM CH10759 GONHER MANN HU7008Z INTERFIL OF3L62</p> <hr/> <p>ALTURA 100mm D.EXTERNO 65mm D.INTERNO 20mm/23mm</p>
	<p>A6 07-11 V8 4.2L A8 07-13 V8 4.2L Q7 07-11 V8 4.2L R8 08-17 V10 5.2L V8 4.2L RS5 06-11 V8 4.2L RS4 06-08 V8 4.2L RS6 10 V10 5.0L S4 10 V6 3.0L S5 08-13 V8 4.2L S6 07-11 V10 5.2L S8 07-09 V10 5.2L</p>	<p>WIX 57330 PROTEC FRAM CH10632 GONHER MANN HU718/8X INTERFIL</p> <hr/> <p>ALTURA 129mm D.EXTERNO 68mm D.INTERNO 26mm/20mm</p>
	<p>A3 04-13 L4 2.0L V6 3.2L A4 05-09 L4 2.0L Q7 13 L4 2.0L TT 04-09 V6 3.2L</p>	<p>WIX 57083 PROTEC 783 FRAM CH9461 GONHER G466 MANN HU719/7X INTERFIL OF9461</p> <hr/> <p>ALTURA 142mm D.EXTERNO 71mm D.INTERNO CERRADO/29mm</p>







	<p>A3 04-10 L4 2.0L A4 05-09 L4 2.0L A6 06 A4 2.0L TT 07-15 L4 2.0L L5 2.5L</p>	<table border="1"> <tr><td>WIX</td><td>57187</td></tr> <tr><td>PROTEC</td><td>787</td></tr> <tr><td>FRAM</td><td>CH9911</td></tr> <tr><td>GONHER</td><td>G313</td></tr> <tr><td>MANN</td><td>HU719/6X</td></tr> <tr><td>INTERFIL</td><td>OF5562</td></tr> <tr><td>ALTURA</td><td>125mm</td></tr> <tr><td>D.EXTERNO</td><td>64mm</td></tr> <tr><td>D.INTERNO</td><td>31mm</td></tr> </table>	WIX	57187	PROTEC	787	FRAM	CH9911	GONHER	G313	MANN	HU719/6X	INTERFIL	OF5562	ALTURA	125mm	D.EXTERNO	64mm	D.INTERNO	31mm
WIX	57187																			
PROTEC	787																			
FRAM	CH9911																			
GONHER	G313																			
MANN	HU719/6X																			
INTERFIL	OF5562																			
ALTURA	125mm																			
D.EXTERNO	64mm																			
D.INTERNO	31mm																			
	<p>A4 01-09 TDI 2.5L A6 02-12 TDI 2.5L A8 02-12 TDI 2.5L ALLROAD 05-08 TFI 2.5L</p>	<table border="1"> <tr><td>WIX</td><td>WL7226</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH8980</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU842X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>199mm</td></tr> <tr><td>D.EXTERNO</td><td>72mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>14mm/34mm</td></tr> </table>	WIX	WL7226	PROTEC		FRAM	CH8980	GONHER		MANN	HU842X	INTERFIL		ALTURA	199mm	D.EXTERNO	72mm/CERRADO	D.INTERNO	14mm/34mm
WIX	WL7226																			
PROTEC																				
FRAM	CH8980																			
GONHER																				
MANN	HU842X																			
INTERFIL																				
ALTURA	199mm																			
D.EXTERNO	72mm/CERRADO																			
D.INTERNO	14mm/34mm																			
	<p>A6 05-06 V8 4.2L A8 04-06 V8 4.2L ALLROAD 03-05 V8 4.2L S4 04-09 V8 4.2L</p>	<table border="1"> <tr><td>WIX</td><td>57329</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9690</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU835/1X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>144mm</td></tr> <tr><td>D.EXTERNO</td><td>73mm</td></tr> <tr><td>D.INTERNO</td><td>9mm/34mm</td></tr> </table>	WIX	57329	PROTEC		FRAM	CH9690	GONHER		MANN	HU835/1X	INTERFIL		ALTURA	144mm	D.EXTERNO	73mm	D.INTERNO	9mm/34mm
WIX	57329																			
PROTEC																				
FRAM	CH9690																			
GONHER																				
MANN	HU835/1X																			
INTERFIL																				
ALTURA	144mm																			
D.EXTERNO	73mm																			
D.INTERNO	9mm/34mm																			
	<p>A3 11 L4 1.4L</p>	<table border="1"> <tr><td>WIX</td><td>WL7410</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9706</td></tr> <tr><td>GONHER</td><td>G562</td></tr> <tr><td>MANN</td><td>HU712/6X</td></tr> <tr><td>INTERFIL</td><td>OF3C11</td></tr> <tr><td>ALTURA</td><td>72mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>9mm/33mm</td></tr> </table>	WIX	WL7410	PROTEC		FRAM	CH9706	GONHER	G562	MANN	HU712/6X	INTERFIL	OF3C11	ALTURA	72mm	D.EXTERNO	65mm/CERRADO	D.INTERNO	9mm/33mm
WIX	WL7410																			
PROTEC																				
FRAM	CH9706																			
GONHER	G562																			
MANN	HU712/6X																			
INTERFIL	OF3C11																			
ALTURA	72mm																			
D.EXTERNO	65mm/CERRADO																			
D.INTERNO	9mm/33mm																			
	<p>A6 13-16 V6 3.0L A7 14-16 V6 3.0L A8 14-16 V6 3.0L Q5 14-16 V6 3.0L Q7 13-16 V6 3.0L</p>	<table border="1"> <tr><td>WIX</td><td>WL10008</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH11490</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU8005Z</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>128mm</td></tr> <tr><td>D.EXTERNO</td><td>71mm/76mm</td></tr> <tr><td>D.INTERNO</td><td>29mm</td></tr> </table>	WIX	WL10008	PROTEC		FRAM	CH11490	GONHER		MANN	HU8005Z	INTERFIL		ALTURA	128mm	D.EXTERNO	71mm/76mm	D.INTERNO	29mm
WIX	WL10008																			
PROTEC																				
FRAM	CH11490																			
GONHER																				
MANN	HU8005Z																			
INTERFIL																				
ALTURA	128mm																			
D.EXTERNO	71mm/76mm																			
D.INTERNO	29mm																			
	<p>A1 15-17 L4 1.8L A3 13-18 L4 1.8L 2.0L A4 12-18 L4 1.8L 2.0L A6 16-17 L4 1.8L 2.0L S3 15-17 L4 2.0L TT 16-18 L4 2.0L</p>	<table border="1"> <tr><td>WIX</td><td>WL10024</td></tr> <tr><td>PROTEC</td><td>711</td></tr> <tr><td>FRAM</td><td>CH11784</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU6002Z</td></tr> <tr><td>INTERFIL</td><td>OF6115</td></tr> <tr><td>ALTURA</td><td>112mm</td></tr> <tr><td>D.EXTERNO</td><td>52mm</td></tr> <tr><td>D.INTERNO</td><td>24mm</td></tr> </table>	WIX	WL10024	PROTEC	711	FRAM	CH11784	GONHER		MANN	HU6002Z	INTERFIL	OF6115	ALTURA	112mm	D.EXTERNO	52mm	D.INTERNO	24mm
WIX	WL10024																			
PROTEC	711																			
FRAM	CH11784																			
GONHER																				
MANN	HU6002Z																			
INTERFIL	OF6115																			
ALTURA	112mm																			
D.EXTERNO	52mm																			
D.INTERNO	24mm																			

	<p>A3 14-17 L4 2.0L</p>	<p>WIX WL10056 PROTEC FRAM CH11675 GONHER MANN HU7020Z INTERFIL</p> <hr/> <p>ALTURA 103mm D.EXTERNO 65mm D.INTERNO CERRADO/31mm</p>
	<p>Q5 (10-12) V6 3.0L Q7 (08-15) V6 3.0L V8 4.2L V12 5.9L</p>	<p>WIX 57161 PROTEC FRAM CH10636 GONHER MANN HU80001X INTERFIL</p> <hr/> <p>ALTURA 200mm D.EXTERNO 75mm 71mm D.INTERNO 28mm</p>
	<p>A6 A7 A8 Q7 (16-20) V6 3.0L</p>	<p>WIX WL10345 PROTEC FRAM GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 105mm D.EXTERNO 64mm D.INTERNO 31mm</p>
	<p>Q7 (2020) L4 2.0L</p>	<p>WIX WL10396 PROTEC FRAM GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 112mm D.EXTERNO 52mm D.INTERNO 24mm</p>
	<p>A8 V8 4.0L 2013-2020 RS7 2014-2020 S6 S7 S8 V8 4.0L 2013-2020</p>	<p>WIX WL10350 PROTEC FRAM GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 119mm D.EXTERNO 68mm D.INTERNO 16mm</p>



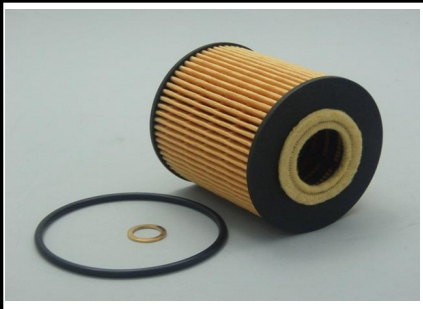


	<p>320I 01-05 L6 2.2L 323 SERIES 98-01 L6 2.5L 325 SERIES 96-06 L6 2.5L 328 SERIES 96-00 L6 2.8L 330 SERIES 01-07 L6 3.0L 520 SERIES 96-00 L6 2.0L 525 SERIES 01-05 L6 2.5L 528 SERIES 96-00 L6 2.8L 530 SERIES 01-05 L6 3.0L X3 04-09 L6 2.5L 3.0L X5 00-06 L6 3.0L Z3 97-02 L6 2.2L 2.5L 2.8L 3.0L Z4 03-09 L6 2.5L 3.0L</p>	<p>WIX 51223 PROTEC 178 FRAM CH8081 GONHER G954 MANN HU925/4X INTERFIL OF8081</p> <hr/> <p>ALTURA 99mm D.EXTERNO 83mm D.INTERNO 40mm</p>
	<p>320I 92-95 L6 2.0L 325 SERIES 92-95 L6 2.5L 525I 91-95 L6 2.5L M3 95-06 L6 3.0L 3.2L Z3 98-02 L6 3.2L Z4 06-08 L6 3.2L</p>	<p>WIX 51160 PROTEC 195 FRAM CH5320 GONHER G963 MANN HU926/3X INTERFIL</p> <hr/> <p>ALTURA 110mm D.EXTERNO 84mm D.INTERNO 28mm</p>
	<p>545 SERIES 04-06 V8 4.4L 645 SERIES 04-05 V8 4.4L 745 SERIES 02-05 V8 4.4L 760 SERIES 03-05 V12 6.0L ALPINA B7 07-08 V8 4.4L X5 04-06 V8 4.4L 4.8L</p>	<p>WIX 57171 PROTEC FRAM CH10530 GONHER G210 MANN HU823X INTERFIL OF10530</p> <hr/> <p>ALTURA 102mm D.EXTERNO 73mm D.INTERNO 9mm/35mm</p>
	<p>328 SERIES 12 L4 2.0L 528 SERIES 12 L4 2.0L X1 12 L4 2.0L Z4 12-13 L4 2.0L</p>	<p>WIX 57292 PROTEC FRAM GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 78mm D.EXTERNO 73mm/81mm D.INTERNO 42mm/35mm</p>
	<p>1 SERIES M 11 L6 3.0L 125I 128I 130I 135IS 08-13 L6 3.0L 228I 16 L4 2.0L 300 SERIES 06 13 L6 2.5L 3.0L 435I 14-16 L6 3.0L 500 SERIES 06-17 L4 2.0L L6 2.5L 3.0L 600 SERIES 12-18 L6 3.0L 700 SERIES 05-15 L6 3.0L ACTIVEHYBRID 3 5 7 12-16 L6 3.0L X1 10-15 L4 2.0L L6 2.5L 3.0L X3 13-17 L6 2.5L 3.0L X4 15-18 L4 2.0L L6 3.0L X5 11-17 L4 2.0L L6 3.0L X6 08-17 L6 3.0L Z4 06-16 L6 2.5L 3.0L</p>	<p>WIX 57327 PROTEC 727 FRAM CH10075 GONHER MANN HU816X INTERFIL OF10075</p> <hr/> <p>ALTURA 79mm D.EXTERNO 73mm D.INTERNO 41mm</p>






	<p>M5 06-10 V10 5.0L M6 06-11 V10 5.0L</p>	<table border="1"> <tr><td>WIX</td><td>57694</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH11038</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU926/5X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>109mm</td></tr> <tr><td>D.EXTERNO</td><td>83mm</td></tr> <tr><td>D.INTERNO</td><td>39mm</td></tr> </table>	WIX	57694	PROTEC		FRAM	CH11038	GONHER		MANN	HU926/5X	INTERFIL		ALTURA	109mm	D.EXTERNO	83mm	D.INTERNO	39mm
WIX	57694																			
PROTEC																				
FRAM	CH11038																			
GONHER																				
MANN	HU926/5X																			
INTERFIL																				
ALTURA	109mm																			
D.EXTERNO	83mm																			
D.INTERNO	39mm																			
	<p>M3 08-13 V8 4.0L</p>	<table border="1"> <tr><td>WIX</td><td>57997</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH11018</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU926/5Z</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>109mm</td></tr> <tr><td>D.EXTERNO</td><td>83mm</td></tr> <tr><td>D.INTERNO</td><td>30mm</td></tr> </table>	WIX	57997	PROTEC		FRAM	CH11018	GONHER		MANN	HU926/5Z	INTERFIL		ALTURA	109mm	D.EXTERNO	83mm	D.INTERNO	30mm
WIX	57997																			
PROTEC																				
FRAM	CH11018																			
GONHER																				
MANN	HU926/5Z																			
INTERFIL																				
ALTURA	109mm																			
D.EXTERNO	83mm																			
D.INTERNO	30mm																			
	<p>550 SERIES 06-10 V8 4.8L 650 SERIES 06-11 V8 4.8L 740 SERIES 10 L6 3.0L 750 SERIES 06-09 V8 4.8L 760 SERIES 06-10 06-10 V12 6.0L X5 07-10 V8 4.8L ROLLS ROYCE 04-13 V12 6.7L</p>	<table border="1"> <tr><td>WIX</td><td>57175</td></tr> <tr><td>PROTEC</td><td>719</td></tr> <tr><td>FRAM</td><td>CH10530</td></tr> <tr><td>GONHER</td><td>G210</td></tr> <tr><td>MANN</td><td>HU823X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>104mm</td></tr> <tr><td>D.EXTERNO</td><td>73mm</td></tr> <tr><td>D.INTERNO</td><td>14mm/33mm</td></tr> </table>	WIX	57175	PROTEC	719	FRAM	CH10530	GONHER	G210	MANN	HU823X	INTERFIL		ALTURA	104mm	D.EXTERNO	73mm	D.INTERNO	14mm/33mm
WIX	57175																			
PROTEC	719																			
FRAM	CH10530																			
GONHER	G210																			
MANN	HU823X																			
INTERFIL																				
ALTURA	104mm																			
D.EXTERNO	73mm																			
D.INTERNO	14mm/33mm																			
	<p>318 SERIES 94-99 L4 1.8L 1.9L Z3 96-99 L4 1.9L</p>	<table border="1"> <tr><td>WIX</td><td>51213</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH8087</td></tr> <tr><td>GONHER</td><td>G975</td></tr> <tr><td>MANN</td><td>HU715/3X</td></tr> <tr><td>INTERFIL</td><td>OF8087</td></tr> <tr><td>ALTURA</td><td>102mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>18mm</td></tr> </table>	WIX	51213	PROTEC		FRAM	CH8087	GONHER	G975	MANN	HU715/3X	INTERFIL	OF8087	ALTURA	102mm	D.EXTERNO	65mm	D.INTERNO	18mm
WIX	51213																			
PROTEC																				
FRAM	CH8087																			
GONHER	G975																			
MANN	HU715/3X																			
INTERFIL	OF8087																			
ALTURA	102mm																			
D.EXTERNO	65mm																			
D.INTERNO	18mm																			
	<p>500 SERIES 94-03 V8 3.0L 4.0L 4.4L 700 SERIES 91- 01 V8 4.0L 4.4L V12 5.0L 800 SERIES 91-99 V8 4.0L 4.4L V12 5.0L 5.4L 5.6L ALPINA ROADSTER 03 V8 4.8L M5 00-03 V8 5.0L X5 00-03 V8 4.4L 4.6L Z8 00- 04 V8 5.0L</p>	<table border="1"> <tr><td>WIX</td><td>51186</td></tr> <tr><td>PROTEC</td><td>196</td></tr> <tr><td>FRAM</td><td>CH8213</td></tr> <tr><td>GONHER</td><td>G984</td></tr> <tr><td>MANN</td><td>HU938/4X</td></tr> <tr><td>INTERFIL</td><td>OF8213</td></tr> <tr><td>ALTURA</td><td>161mm</td></tr> <tr><td>D.EXTERNO</td><td>83mm</td></tr> <tr><td>D.INTERNO</td><td>25mm/38mm</td></tr> </table>	WIX	51186	PROTEC	196	FRAM	CH8213	GONHER	G984	MANN	HU938/4X	INTERFIL	OF8213	ALTURA	161mm	D.EXTERNO	83mm	D.INTERNO	25mm/38mm
WIX	51186																			
PROTEC	196																			
FRAM	CH8213																			
GONHER	G984																			
MANN	HU938/4X																			
INTERFIL	OF8213																			
ALTURA	161mm																			
D.EXTERNO	83mm																			
D.INTERNO	25mm/38mm																			
	<p>300 SERIES L4 99-14 500 SERIES L4 00-04</p>	<table border="1"> <tr><td>WIX</td><td>WL7236</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9011</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU718/1Z</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>115mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>31mm</td></tr> </table>	WIX	WL7236	PROTEC		FRAM	CH9011	GONHER		MANN	HU718/1Z	INTERFIL		ALTURA	115mm	D.EXTERNO	65mm	D.INTERNO	31mm
WIX	WL7236																			
PROTEC																				
FRAM	CH9011																			
GONHER																				
MANN	HU718/1Z																			
INTERFIL																				
ALTURA	115mm																			
D.EXTERNO	65mm																			
D.INTERNO	31mm																			



	<p>330 L6 99-05 530 L6 98-05 730 L6 98-01 X5 L6 3.0L 01-14</p>	<p>WIX WL7283 PROTEC FRAM CH9348 GONHER MANN HU818X INTERFIL</p> <hr/> <p>ALTURA 79mm D.EXTERNO 68mm D.INTERNO 29mm</p>
	<p>318 10 L4 2.0L</p>	<p>WIX WL7303 PROTEC FRAM CH9528 GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 154mm D.EXTERNO 65mm/CERRADO D.INTERNO 32mm</p>
	<p>116I 08 L4 1.6L 118I 12 L4 2.0L 120I L4 2.0L</p>	<p>WIX WL7403 PROTEC FRAM CH9547 GONHER MANN HU815/2X INTERFIL</p> <hr/> <p>ALTURA 81mm D.EXTERNO 72mm/CERRADO D.INTERNO 31mm</p>
	<p>125I L4 2.0L 228 15-16 L4 2.0L 300 SERIES 12-17 L4 2.0L 428I 14-16 L4 2.0L 500 SERIES 13-15 L4 2.0L X1 L4 2.0L X5 16-17 V8 4.4L L4 2.0L Z4 14-16 L4 2.0L</p>	<p>WIX WL7509 PROTEC FRAM GONHER MANN HU816Z INTERFIL</p> <hr/> <p>ALTURA 79mm D.EXTERNO 74mm D.INTERNO 41mm</p>
	<p>114I 12 L4 1.6L 118I 12-15 L4 1.6L</p>	<p>WIX WL7502 PROTEC FRAM GONHER MANN HU7003/X INTERFIL</p> <hr/> <p>ALTURA 83mm D.EXTERNO 65mm D.INTERNO 32mm</p>
	<p>120D 12 L4 2.0L 230I 17 L4 2.0L 328I 16-17 L4 2.0L 330I 17 L4 2.0L 430I 17-18 L4 2.0L L6 3.0L 530I 17 L4 2.0L 535 16 L6 3.0L 740 SERIES 15 L6 3.0L X3 15-17 L4 2.0L X5 14-17 L6 3.0L</p>	<p>WIX WL10025 PROTEC FRAM CH11217 GONHER MANN HU6004X INTERFIL</p> <hr/> <p>ALTURA 135mm D.EXTERNO 52mm/53mm D.INTERNO 16mm/19mm</p>

		<p>WIX WL7522 PROTEC FRAM</p>
---	--	---

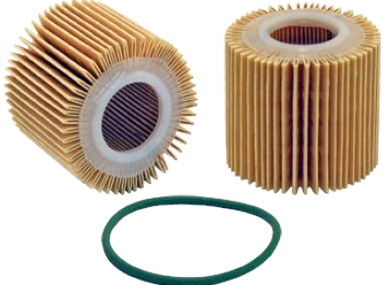	<p>220I (14-18) L4 2.0L 18 (14-20) L3 1.5L X1 (16-20) L4 2.0L X2 (18-20) L4 2.0L</p>	<p>GONHER MANN INTERFIL</p> <p>ALTURA 125MM D.EXTERNO 53MM D.INTERNO 26MM 23MM</p>
	<p>118I (17-18) L3 1.5L 120I (17-18) L4 2.0L 230I DRIVE (17-20) L4 2.0L 330I (16-20) L4 2.0L 430I (17-20) L4 2.0L 530I (17-20) L4 2.0L 740I (19-20) L4 2.0L X3 (19-20) L4 2.0L X4 (19-20) L4 2.0L Z4 (19-20) L4 2.0L</p>	<p>WIX WL10358 PROTEC FRAM GONHER MANN INTERFIL</p> <p>ALTURA 134MM D.EXTERNO 53MM D.INTERNO 20MM 20MM</p>
	<p>340 (16-19) L6 3.0L 440I (17-2) L6 3.0L 540I (17-20) L6 3.0L 840I (2020) L6 3.0L M240 (17-20) L6 3.0L X3 X4 X5 (17-20) L6 3.0L Z4 (19-20) L6 3.0L</p>	<p>WIX WL10342 PROTEC FRAM GONHER MANN INTERFIL</p> <p>ALTURA 155MM D.EXTERNO 54MM 56MM D.INTERNO 21MM</p>



	<p>PONTIAC VIBE 09-10 L4 1.8L</p>	<p>WIX 57064 PROTEC 118 FRAM CH10358 GONHER G911 MANN INTERFIL OF10358</p> <hr/> <p>ALTURA 56mm D.EXTERNO 60mm D.INTERNO 28mm</p>
	<p>CADILLAC ATS 13-15 V6 3.6L CTS 04-15 V6 2.8L 3.0L 3.6L SRX 04-11 V6 3.8L 3.6L STS 05-11 V6 3.6L CHEVROLET CAMARO 09-15 V6 3.6L CAPRICE 12-17 V6 3.6L COLORADO 15-16 V6 3.6L VECTRA 06-08 V6 2.8L GMC CANYON 15-16 V6 3.6L PONTIAC G8 08-09 V6 3.6L</p>	<p>WIX 57090 PROTEC 176 FRAM CH8765 GONHER G765 MANN INTERFIL OF8765</p> <hr/> <p>ALTURA 98mm D.EXTERNO 53mm D.INTERNO 20mm</p>
	<p>ASTRA 01-06 L4 2.0L 2.4L CAPTIVA 09-15 L4 2.4L COBALT 05-10 L4 2.0L 2.4L EQUINOX 10-17 L4 2.4L HHR 07-11 L4 2.0L 2.2L 2.4L IMPALA 14-15 L4 2.4L MALIBU 04-14 L4 2.2L 2.4L VECTRA L4 2.2L V6 3.2L PONTIAC G4 06-08 L4 2.2L 2.4L G5 07-10 L4 2.2L 2.4L G6 06-10 L4 2.4L SOLSTICE 06-10 L4 2.0L 2.4L BUIK ALLURE 10 L4 2.4L LACROSSE 10-16 L4 2.4L REGAL 11-17 L4 2.4L VERANO 12-17 L4 2.0L 2.4L</p>	<p>WIX 57082 PROTEC 182 FRAM CH9018 GONHER G49 MANN ML1015 INTERFIL OF9018</p> <hr/> <p>ALTURA 89mm D.EXTERNO 68mm D.INTERNO 35mm/10mm</p>
	<p>BUIK CASCADA 16-17 L4 1.6L ENCORE 13-17 L4 1.4L AVEO 09-11 L4 1.6L COLORADO 17 V6 3.6L CRUZE 09-16 L4 1.4L 1.8L MALIBU 16-17 L4 1.8L SONIC 12-17 L4 1.4L 1.6L 1.8L TRAX 13-18 L4 1.4L 1.8L</p>	<p>WIX 57674 PROTEC 774 FRAM CH10246 GONHER G3751 MANN HU612/2X INTERFIL OF10246</p> <hr/> <p>ALTURA 106mm D.EXTERNO 57mm D.INTERNO 10mm/26mm</p>
	<p>CADILLAC CATERA 99-01 V6 3.0L ASTRA 00-05 L4 1.8L ZAFIRA 02-06 L4 1.8L SATURN VUE 02-03 V6 3.0L</p>	<p>WIX 57033 PROTEC 187 FRAM CH8806 GONHER G45 MANN ML1028 INTERFIL OF8806</p> <hr/> <p>ALTURA 79mm D.EXTERNO 63mm D.INTERNO CERRADO/28mm</p>

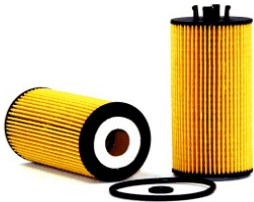	<p align="center">CADILLAC CTS 03-04 V6 3.2L</p>	<table border="1"> <tr> <td>WIX</td> <td>57079</td> </tr> <tr> <td>PROTEC</td> <td>199</td> </tr> <tr> <td>FRAM</td> <td>CH9447</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td></td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>112mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>52mm</td> </tr> <tr> <td>D.INTERNO</td> <td>CERRADO/20mm</td> </tr> </table>	WIX	57079	PROTEC	199	FRAM	CH9447	GONHER		MANN		INTERFIL		ALTURA	112mm	D.EXTERNO	52mm	D.INTERNO	CERRADO/20mm
WIX	57079																			
PROTEC	199																			
FRAM	CH9447																			
GONHER																				
MANN																				
INTERFIL																				
ALTURA	112mm																			
D.EXTERNO	52mm																			
D.INTERNO	CERRADO/20mm																			
	<p align="center">CRUZE L4 1.4L 1.8L TURBO 2013-2016 MALIBU 2016-2020 SONIC TRAX L4 1.4L 1.8L TURBO 2013- 2021</p>	<table border="1"> <tr> <td>WIX</td> <td>WL10283</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td></td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td></td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>117mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>56mm</td> </tr> <tr> <td>D.INTERNO</td> <td>28mm</td> </tr> </table>	WIX	WL10283	PROTEC		FRAM		GONHER		MANN		INTERFIL		ALTURA	117mm	D.EXTERNO	56mm	D.INTERNO	28mm
WIX	WL10283																			
PROTEC																				
FRAM																				
GONHER																				
MANN																				
INTERFIL																				
ALTURA	117mm																			
D.EXTERNO	56mm																			
D.INTERNO	28mm																			

CHRYSLER



	<p>CROSSFIRE 04-08 V6 3.2L</p>	<table border="1"> <tr><td>WIX</td><td>51226</td></tr> <tr><td>PROTEC</td><td>179/778</td></tr> <tr><td>FRAM</td><td>CH8481</td></tr> <tr><td>GONHER</td><td>G180</td></tr> <tr><td>MANN</td><td>HU718/4X</td></tr> <tr><td>INTERFIL</td><td>OF8481</td></tr> <tr><td>ALTURA</td><td>116mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>29mm</td></tr> </table>	WIX	51226	PROTEC	179/778	FRAM	CH8481	GONHER	G180	MANN	HU718/4X	INTERFIL	OF8481	ALTURA	116mm	D.EXTERNO	65mm	D.INTERNO	29mm
WIX	51226																			
PROTEC	179/778																			
FRAM	CH8481																			
GONHER	G180																			
MANN	HU718/4X																			
INTERFIL	OF8481																			
ALTURA	116mm																			
D.EXTERNO	65mm																			
D.INTERNO	29mm																			
	<p>DART 13-16 L4 1.4L JEEP RENEGADE 15-17 L4 1.4L</p>	<table border="1"> <tr><td>WIX</td><td>57341</td></tr> <tr><td>PROTEC</td><td>721</td></tr> <tr><td>FRAM</td><td>CH9713</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU713/1X</td></tr> <tr><td>INTERFIL</td><td>OF7300</td></tr> <tr><td>ALTURA</td><td>83mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>24mm</td></tr> </table>	WIX	57341	PROTEC	721	FRAM	CH9713	GONHER		MANN	HU713/1X	INTERFIL	OF7300	ALTURA	83mm	D.EXTERNO	65mm	D.INTERNO	24mm
WIX	57341																			
PROTEC	721																			
FRAM	CH9713																			
GONHER																				
MANN	HU713/1X																			
INTERFIL	OF7300																			
ALTURA	83mm																			
D.EXTERNO	65mm																			
D.INTERNO	24mm																			
	<p>200 11-13 V6 3.6L 300 11-13 V6 3.6L TOWN & COUNTRY 11-13 V6 3.6L DODGE AVENGER 11-13 V6 3.6L CHALLENGER 11-13 V6 3.6L CHARGER 11-13 V6 3.6L DURANGO 11-13 V6 3.6L JOURNEY 11-13 V6 3.6L GRAND CHEROKEE 11-13 V6 3.6L WRANGLER 12-13 V6 3.6L RAM 1500 13 V6 3.6L C/V 12-13 V6 3.6L</p>	<table border="1"> <tr><td>WIX</td><td>57526</td></tr> <tr><td>PROTEC</td><td>726</td></tr> <tr><td>FRAM</td><td>CH10955</td></tr> <tr><td>GONHER</td><td>G3744</td></tr> <tr><td>MANN</td><td>HU6009Z</td></tr> <tr><td>INTERFIL</td><td>OF10955</td></tr> <tr><td>ALTURA</td><td>137mm</td></tr> <tr><td>D.EXTERNO</td><td>52mm</td></tr> <tr><td>D.INTERNO</td><td>9mm/22mm</td></tr> </table>	WIX	57526	PROTEC	726	FRAM	CH10955	GONHER	G3744	MANN	HU6009Z	INTERFIL	OF10955	ALTURA	137mm	D.EXTERNO	52mm	D.INTERNO	9mm/22mm
WIX	57526																			
PROTEC	726																			
FRAM	CH10955																			
GONHER	G3744																			
MANN	HU6009Z																			
INTERFIL	OF10955																			
ALTURA	137mm																			
D.EXTERNO	52mm																			
D.INTERNO	9mm/22mm																			
	<p>200 14-17 V6 3.6L 300 14-17 V6 3.6L PACIFICA 17 V6 3.6L TOWN & COUNTRY 14-16 V6 3.6L DODGE AVENGER 14 V6 3.6L CHALLENGER 14-17 V6 3.6L CHARGER 14-17 V6 3.6L DURANGO 14-17 V6 3.6L GRAND CARAVAN 14-17 V6 3.6L JOURNEY 14-18 V6 3.6L JEEP CHEROKEE 14-17 V6 3.2L GRAND CHEROKEE 14-17 V6 3.6L WRANGLER 14-17 V6 3.6L V6 3.6L RAM 1500 14-17 V6 3.6L PRO MASTER 1500 2500 3500 14-17 V6 3.6L</p>	<table border="1"> <tr><td>WIX</td><td>WL10010</td></tr> <tr><td>PROTEC</td><td>710</td></tr> <tr><td>FRAM</td><td>CH11665</td></tr> <tr><td>GONHER</td><td>G349</td></tr> <tr><td>MANN</td><td></td></tr> <tr><td>INTERFIL</td><td>OF11665</td></tr> <tr><td>ALTURA</td><td>156mm</td></tr> <tr><td>D.EXTERNO</td><td>50mm/50mm</td></tr> <tr><td>D.INTERNO</td><td>19mm/23mm</td></tr> </table>	WIX	WL10010	PROTEC	710	FRAM	CH11665	GONHER	G349	MANN		INTERFIL	OF11665	ALTURA	156mm	D.EXTERNO	50mm/50mm	D.INTERNO	19mm/23mm
WIX	WL10010																			
PROTEC	710																			
FRAM	CH11665																			
GONHER	G349																			
MANN																				
INTERFIL	OF11665																			
ALTURA	156mm																			
D.EXTERNO	50mm/50mm																			
D.INTERNO	19mm/23mm																			
	<p>JEEP GRAND CHEROKEE 07-09 V6 3.0L</p>	<table border="1"> <tr><td>WIX</td><td>57062</td></tr> <tr><td>PROTEC</td><td>722</td></tr> <tr><td>FRAM</td><td>CH10323</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU821/X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>95mm</td></tr> <tr><td>D.EXTERNO</td><td>71mm</td></tr> <tr><td>D.INTERNO</td><td>31mm</td></tr> </table>	WIX	57062	PROTEC	722	FRAM	CH10323	GONHER		MANN	HU821/X	INTERFIL		ALTURA	95mm	D.EXTERNO	71mm	D.INTERNO	31mm
WIX	57062																			
PROTEC	722																			
FRAM	CH10323																			
GONHER																				
MANN	HU821/X																			
INTERFIL																				
ALTURA	95mm																			
D.EXTERNO	71mm																			
D.INTERNO	31mm																			






	<p align="center">JEEP LIBERTY 01-14 L4 2.5L</p>	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL7412</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH9685</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>HU718X</td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>117mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>62mm</td> </tr> <tr> <td>D.INTERNO</td> <td>31mm</td> </tr> </tbody> </table>	WIX	WL7412	PROTEC		FRAM	CH9685	GONHER		MANN	HU718X	INTERFIL		ALTURA	117mm	D.EXTERNO	62mm	D.INTERNO	31mm
WIX	WL7412																			
PROTEC																				
FRAM	CH9685																			
GONHER																				
MANN	HU718X																			
INTERFIL																				
ALTURA	117mm																			
D.EXTERNO	62mm																			
D.INTERNO	31mm																			
	<p align="center">JEEP GRAND CHEROKEE 14-17 V6 3.0L RAM 1500 14-17 V6 3.0L</p>	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL10060</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH11794</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td></td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>124mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>66mm</td> </tr> <tr> <td>D.INTERNO</td> <td>CERRADO/18mm</td> </tr> </tbody> </table>	WIX	WL10060	PROTEC		FRAM	CH11794	GONHER		MANN		INTERFIL		ALTURA	124mm	D.EXTERNO	66mm	D.INTERNO	CERRADO/18mm
WIX	WL10060																			
PROTEC																				
FRAM	CH11794																			
GONHER																				
MANN																				
INTERFIL																				
ALTURA	124mm																			
D.EXTERNO	66mm																			
D.INTERNO	CERRADO/18mm																			
	<p align="center">RAM 700 15-18 L4 .6L VISION 15-17 L4 1.6L</p>	<table border="1"> <tbody> <tr> <td>PROFIARE</td> <td>WEC6818</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td></td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td></td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td></td> </tr> <tr> <td>D.EXTERNO</td> <td></td> </tr> <tr> <td>D.INTERNO</td> <td></td> </tr> </tbody> </table>	PROFIARE	WEC6818	PROTEC		FRAM		GONHER		MANN		INTERFIL		ALTURA		D.EXTERNO		D.INTERNO	
PROFIARE	WEC6818																			
PROTEC																				
FRAM																				
GONHER																				
MANN																				
INTERFIL																				
ALTURA																				
D.EXTERNO																				
D.INTERNO																				








124 SPIDER 17 L4 1.4L 500 12-17 L4 1.4L 500
ABARTH 16-17 L4 1.4L 500C 16-17 L4 1.4L 500L 14-
17 L4 1.4L 500X 16-17 L4 1.4L PUNTO 09-15 L4 1.4L

WIX	57341
PROTEC	721
FRAM	CH9713
GONHER	
MANN	HU713/1X
INTERFIL	OF7300
ALTURA	83mm
D.EXTERNO	65mm
D.INTERNO	24mm



	<p>EXCURSION 03 V8 6.0L F-SERIES SUPER DUTY 03-04 V8 6.0L F 650 03-08 V8 6.0L F750 04-08 V8 6.0L</p>	<table border="1"> <tr><td>WIX</td><td>57312/57311</td></tr> <tr><td>PROTEC</td><td>112</td></tr> <tr><td>FRAM</td><td>CH9549</td></tr> <tr><td>GONHER</td><td>G3752</td></tr> <tr><td>MANN</td><td>HU958/1X</td></tr> <tr><td>INTERFIL</td><td>OF9549</td></tr> <tr><td>ALTURA</td><td>179mm</td></tr> <tr><td>D.EXTERNO</td><td>83mm</td></tr> <tr><td>D.INTERNO</td><td>CERRADO/38mm</td></tr> </table>	WIX	57312/57311	PROTEC	112	FRAM	CH9549	GONHER	G3752	MANN	HU958/1X	INTERFIL	OF9549	ALTURA	179mm	D.EXTERNO	83mm	D.INTERNO	CERRADO/38mm
WIX	57312/57311																			
PROTEC	112																			
FRAM	CH9549																			
GONHER	G3752																			
MANN	HU958/1X																			
INTERFIL	OF9549																			
ALTURA	179mm																			
D.EXTERNO	83mm																			
D.INTERNO	CERRADO/38mm																			
	<p>ESCAPE 06-09 L4 2.3L 2.5L FUSION 06-09 L4 2.3L MONDEO 02-07 V6 2.5L MERCURY MARINER 06-10 L4 2.3L 2.5L MILAN 06-09 L4 2.3L</p>	<table border="1"> <tr><td>WIX</td><td>57203</td></tr> <tr><td>PROTEC</td><td>190</td></tr> <tr><td>FRAM</td><td>CH9641</td></tr> <tr><td>GONHER</td><td>G70</td></tr> <tr><td>MANN</td><td>HU711/2</td></tr> <tr><td>INTERFIL</td><td>OF9641</td></tr> <tr><td>ALTURA</td><td>74mm</td></tr> <tr><td>D.EXTERNO</td><td>68mm</td></tr> <tr><td>D.INTERNO</td><td>29mm</td></tr> </table>	WIX	57203	PROTEC	190	FRAM	CH9641	GONHER	G70	MANN	HU711/2	INTERFIL	OF9641	ALTURA	74mm	D.EXTERNO	68mm	D.INTERNO	29mm
WIX	57203																			
PROTEC	190																			
FRAM	CH9641																			
GONHER	G70																			
MANN	HU711/2																			
INTERFIL	OF9641																			
ALTURA	74mm																			
D.EXTERNO	68mm																			
D.INTERNO	29mm																			
	<p>FOCUS 07-11 L5 2.5L FOCUS RS 11 V6 2.5L FOCUS ST 11 V6 2.5L</p>	<table border="1"> <tr><td>WIX</td><td>57186</td></tr> <tr><td>PROTEC</td><td>786</td></tr> <tr><td>FRAM</td><td>CH9954</td></tr> <tr><td>GONHER</td><td>G570</td></tr> <tr><td>MANN</td><td>HU719/8X</td></tr> <tr><td>INTERFIL</td><td>OF9954</td></tr> <tr><td>ALTURA</td><td>125mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>31mm</td></tr> </table>	WIX	57186	PROTEC	786	FRAM	CH9954	GONHER	G570	MANN	HU719/8X	INTERFIL	OF9954	ALTURA	125mm	D.EXTERNO	65mm	D.INTERNO	31mm
WIX	57186																			
PROTEC	786																			
FRAM	CH9954																			
GONHER	G570																			
MANN	HU719/8X																			
INTERFIL	OF9954																			
ALTURA	125mm																			
D.EXTERNO	65mm																			
D.INTERNO	31mm																			
	<p>TRANSIT 07-15 L4 2.2L</p>	<table border="1"> <tr><td>WIX</td><td>57512</td></tr> <tr><td>PROTEC</td><td>812</td></tr> <tr><td>FRAM</td><td>CH10066/CH9973</td></tr> <tr><td>GONHER</td><td>G341</td></tr> <tr><td>MANN</td><td>HU711/51X</td></tr> <tr><td>INTERFIL</td><td>OF11Z1</td></tr> <tr><td>ALTURA</td><td>69mm</td></tr> <tr><td>D.EXTERNO</td><td>64mm</td></tr> <tr><td>D.INTERNO</td><td>21mm/29mm</td></tr> </table>	WIX	57512	PROTEC	812	FRAM	CH10066/CH9973	GONHER	G341	MANN	HU711/51X	INTERFIL	OF11Z1	ALTURA	69mm	D.EXTERNO	64mm	D.INTERNO	21mm/29mm
WIX	57512																			
PROTEC	812																			
FRAM	CH10066/CH9973																			
GONHER	G341																			
MANN	HU711/51X																			
INTERFIL	OF11Z1																			
ALTURA	69mm																			
D.EXTERNO	64mm																			
D.INTERNO	21mm/29mm																			
	<p>MONDEO III 00-07 L4 2.0L TRANSIT 00-06 L4 2.0L</p>	<table border="1"> <tr><td>WIX</td><td>WL7286</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9023</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU920X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>59mm</td></tr> <tr><td>D.EXTERNO</td><td>91mm</td></tr> <tr><td>D.INTERNO</td><td>34mm</td></tr> </table>	WIX	WL7286	PROTEC		FRAM	CH9023	GONHER		MANN	HU920X	INTERFIL		ALTURA	59mm	D.EXTERNO	91mm	D.INTERNO	34mm
WIX	WL7286																			
PROTEC																				
FRAM	CH9023																			
GONHER																				
MANN	HU920X																			
INTERFIL																				
ALTURA	59mm																			
D.EXTERNO	91mm																			
D.INTERNO	34mm																			

	<p>RANGER 11-17 L4 2.2L L5 3.2L</p>	<p>WIX WL7508 PROTEC FRAM GONHER MANN HU7002Z INTERFIL</p> <hr/> <p>ALTURA 71mm D.EXTERNO 65mm/CERRADO D.INTERNO 32mm</p>
	<p>GT 05-06 V8 5.4L</p>	<p>WIX 57806 PROTEC FRAM CH10415 GONHER MANN HU925/4Y INTERFIL</p> <hr/> <p>ALTURA 102mm D.EXTERNO 83mm D.INTERNO 43mm</p>
	<p>EDGE 15-17 V6 2.7L FUSION 17 V6 2.7L F150 15-17 V6 2.7L LINCOLN CONTINENTAL 17 V6 2.7L 3.0L MKX 16-17 V6 2.7L MKZ 17 V6 3.0L</p>	<p>WIX WL10050 PROTEC FRAM GONHER CH11955 MANN INTERFIL</p> <hr/> <p>ALTURA 137mm D.EXTERNO 49mm D.INTERNO 22mm</p>
	<p>PICKUP F150 (18-20) V6 3.0L</p>	<p>WIX WL7490 PROTEC FRAM GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 95mm D.EXTERNO 79mm D.INTERNO 38mm</p>
	<p>TRANSIT CONNECT L4 1.5L 2019-2020</p>	<p>WIX WL10397 PROTEC FRAM GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 93mm D.EXTERNO 49mm D.INTERNO 38mm</p>






	<p>AZERA 06-10 V6 3.3L 3.8L ENTOURARE 07-10 V6 3.8L SANTA FE 07-09 V6 3.3L SONATA 06-10 V6 3.3L VERACRUZ 07-09 V6 3.8L</p>	<p>WIX 57061 PROTEC 117 FRAM CH9999 GONHER MANN ML1037 INTERFIL</p> <hr/> <p>ALTURA 131mm D.EXTERNO 73mm D.INTERNO 43mm</p>
	<p>ELANTRA 01-14 L4 2.0L SPORTAGE 05-14 L4 2.0L</p>	<p>WIX WL7412 PROTEC FRAM CH9685 GONHER MANN HU718X INTERFIL</p> <hr/> <p>ALTURA 117mm D.EXTERNO 62mm D.INTERNO 31mm</p>
	<p>AZERA 12-17 V6 3.3L SANTA FE 10-18 V6 3.3L 3.5L</p>	<p>WIX WL10164 PROTEC FRAM CH10855 GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 122mm D.EXTERNO 65mm/68mm D.INTERNO 20mm/26mm</p>








	<p>JAGUAR X-TYPE L4 2.0L 2.2L 07-14</p>	<table border="0"> <tr><td>WIX</td><td>WL7286</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9023</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU920X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>59mm</td></tr> <tr><td>D.EXTERNO</td><td>91mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>34mm</td></tr> </table>	WIX	WL7286	PROTEC		FRAM	CH9023	GONHER		MANN	HU920X	INTERFIL		ALTURA	59mm	D.EXTERNO	91mm/CERRADO	D.INTERNO	34mm
WIX	WL7286																			
PROTEC																				
FRAM	CH9023																			
GONHER																				
MANN	HU920X																			
INTERFIL																				
ALTURA	59mm																			
D.EXTERNO	91mm/CERRADO																			
D.INTERNO	34mm																			
	<p>F-PACE 17-18 V6 3.0L F-TYPE 14-18 V6 3.0L V8 5.0L XE 17 V6 3.0L XF 10-18 V6 3.0L V8 5.0L XFR 10-15 10-15 V8 5.0L XJ 10-17 V6 3.0L V8 5.0L XK 10-15 V8 5.0L</p>	<table border="0"> <tr><td>WIX</td><td>57279</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH10992</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU8008Z</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>148mm</td></tr> <tr><td>D.EXTERNO</td><td>71mm/75mm</td></tr> <tr><td>D.INTERNO</td><td>19mm/25mm</td></tr> </table>	WIX	57279	PROTEC		FRAM	CH10992	GONHER		MANN	HU8008Z	INTERFIL		ALTURA	148mm	D.EXTERNO	71mm/75mm	D.INTERNO	19mm/25mm
WIX	57279																			
PROTEC																				
FRAM	CH10992																			
GONHER																				
MANN	HU8008Z																			
INTERFIL																				
ALTURA	148mm																			
D.EXTERNO	71mm/75mm																			
D.INTERNO	19mm/25mm																			
	<p>E-PACE F-PACE F-TYPE XE XF (17-20) L4 2.0L</p>	<table border="0"> <tr><td>WIX</td><td>WL10419</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td></td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td></td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>99mm</td></tr> <tr><td>D.EXTERNO</td><td>57mm</td></tr> <tr><td>D.INTERNO</td><td>23mm</td></tr> </table>	WIX	WL10419	PROTEC		FRAM		GONHER		MANN		INTERFIL		ALTURA	99mm	D.EXTERNO	57mm	D.INTERNO	23mm
WIX	WL10419																			
PROTEC																				
FRAM																				
GONHER																				
MANN																				
INTERFIL																				
ALTURA	99mm																			
D.EXTERNO	57mm																			
D.INTERNO	23mm																			



	<p>AMANTI 07-09 V6 3.8L SEDONA 06-10 V6 3.8L SORENTO 07-09 V6 3.3L 3.8L</p>	<table border="1"> <tbody> <tr> <td>WIX</td> <td>57061</td> </tr> <tr> <td>PROTEC</td> <td>117</td> </tr> <tr> <td>FRAM</td> <td>CH9999</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>ML1037</td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>131mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>73mm</td> </tr> <tr> <td>D.INTERNO</td> <td>43mm</td> </tr> </tbody> </table>	WIX	57061	PROTEC	117	FRAM	CH9999	GONHER		MANN	ML1037	INTERFIL		ALTURA	131mm	D.EXTERNO	73mm	D.INTERNO	43mm
WIX	57061																			
PROTEC	117																			
FRAM	CH9999																			
GONHER																				
MANN	ML1037																			
INTERFIL																				
ALTURA	131mm																			
D.EXTERNO	73mm																			
D.INTERNO	43mm																			
	<p>CADENZA 14-16 V6 3.3L SEDONA 11-17 V6 3.3L 3.5L SORENTO 11-18 V6 3.3L 3.5L</p>	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL10164</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH10855</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td></td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>122mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>65mm/68mm</td> </tr> <tr> <td>D.INTERNO</td> <td>20mm/26mm</td> </tr> </tbody> </table>	WIX	WL10164	PROTEC		FRAM	CH10855	GONHER		MANN		INTERFIL		ALTURA	122mm	D.EXTERNO	65mm/68mm	D.INTERNO	20mm/26mm
WIX	WL10164																			
PROTEC																				
FRAM	CH10855																			
GONHER																				
MANN																				
INTERFIL																				
ALTURA	122mm																			
D.EXTERNO	65mm/68mm																			
D.INTERNO	20mm/26mm																			
	<p>SPORTAGE 06-14 L4 2.0L</p>	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL7412</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH9685</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>HU718X</td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>117mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>62mm</td> </tr> <tr> <td>D.INTERNO</td> <td>31mm</td> </tr> </tbody> </table>	WIX	WL7412	PROTEC		FRAM	CH9685	GONHER		MANN	HU718X	INTERFIL		ALTURA	117mm	D.EXTERNO	62mm	D.INTERNO	31mm
WIX	WL7412																			
PROTEC																				
FRAM	CH9685																			
GONHER																				
MANN	HU718X																			
INTERFIL																				
ALTURA	117mm																			
D.EXTERNO	62mm																			
D.INTERNO	31mm																			



	<p>RANGE ROVER 03-05 V8 4.4L</p>	<p>WIX 51186 PROTEC 196 FRAM CH8213 GONHER G984 MANN HU938/4X INTERFIL OF8213</p> <hr/> <p>ALTURA 161mm D.EXTERNO 83mm D.INTERNO 25mm/38mm</p>
	<p>FREELANDER 00-14 L4 2.0L ROVER 75 01-14 L4 2.0L MG ROVER 02-14 L4 2.0L</p>	<p>WIX WL7236 PROTEC FRAM CH9011 GONHER MANN HU718/1Z INTERFIL</p> <hr/> <p>ALTURA 115mm D.EXTERNO 65mm/CERRADO D.INTERNO 31mm</p>
	<p>DISCOVERY 17 V6 3.0L LR4 10-16 V6 3.0L V8 5.0L RANGER ROVER 10-17 V6 3.0L V8 5.0L RANGE ROVER SPORT 10-17 V6 3.0L V8 5.0L</p>	<p>WIX 57279 PROTEC FRAM CH10992 GONHER MANN HU8008Z INTERFIL</p> <hr/> <p>ALTURA 148mm D.EXTERNO 71mm/75mm D.INTERNO 19mm/25mm</p>
	<p>LR2 08-13 L6 3.2L</p>	<p>WIX 57806 PROTEC FRAM CH10415 GONHER MANN HU925/4Y INTERFIL</p> <hr/> <p>ALTURA 102mm D.EXTERNO 83mm D.INTERNO 43mm</p>
	<p>DISCOVERY (14-20) V6 3.0L RANGER ROVER (16-20) V6 3.0L</p>	<p>WIX WL7490 PROTEC FRAM GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 95mm D.EXTERNO 79mm D.INTERNO 38mm</p>

		<p>WIX WL10419</p>
--	--	--------------------



DISCOVERY RANGER ROVER EVOQUE (18-20) L4
2.0L

PROTEC
FRAM
GONHER
MANN
INTERFIL

ALTURA	99mm
D.EXTERNO	57mm
D.INTERNO	23mm



MAZDA









3 04-09 L4 2.3L 5 06-12 L4 2.3L 2.5L **CX-7** 07-12 L4
2.3L 2.5L

WIX	57203
PROTEC	190
FRAM	CH9641
GONHER	G70
MANN	HU711/2
INTERFIL	OF9641
ALTURA	74mm
D.EXTERNO	68mm
D.INTERNO	29mm



Mercedes-Benz

	<p>C240 01-04 V6 2.6L C280 98-00 V6 2.8L C320 01-04 V6 3.2L CL500 01-04 V8 5.0L CL600 01-04 V12 5.8L 5.5L CLK280 07-08 V6 3.0L CLK320 98-05 V6 3.2L CLK430 99-03 V8 4.3L CLK500 03-04 V8 5.0L E280 99-08 V6 2.8L 3.0L ML320 98-04 V6 3.2L 3.7L SLK320 01-04 V6 3.2L</p>	<p>WIX 51226 PROTEC 179/778 FRAM CH8481 GONHER G180 MANN HU718/4X INTERFIL OF8481</p> <hr/> <p>ALTURA 116mm D.EXTERNO 65mm D.INTERNO 29mm</p>
	<p>300 SERIES 90-93 L6 2.8L 3.0L 3.2L C200 94-02 L4 2.2L 2.3L 2.8L L6 3.6L E230 96-97 L4 2.3L E320 94-97 L6 3.2L ML230 98-00 L4 2.3L SLK200 03-08 L4 2.0L SLK230 98-04 L4 2.3L</p>	<p>WIX 51145 PROTEC 193 FRAM CH6848 GONHER G971 MANN HU727/1X INTERFIL OF6848</p> <hr/> <p>ALTURA 157mm D.EXTERNO 62mm D.INTERNO CERRADO/23mm</p>
	<p>E300 96-99 L6 3.0L S300 97 L6 3.0L</p>	<p>WIX 51187 PROTEC FRAM CH8871 GONHER MANN HU951X INTERFIL</p> <hr/> <p>ALTURA 174mm D.EXTERNO 83mm D.INTERNO 33mm</p>
	<p>600 SERIES 93 V12 6.0L 600 SEL 92 V12 6.0L CL600 97-00 V12 6.0L S600 94-99 V12 6.0L SL60 AMG 97-99 V8 6.0L SL600 94-02 V12 6.0L</p>	<p>WIX 51230 PROTEC FRAM CH8623 GONHER MANN HU736X INTERFIL OF7338</p> <hr/> <p>ALTURA 210mm D.EXTERNO 62mm D.INTERNO CERRADO/23mm</p>
	<p>C200 KOMPRESOR 10 L4 1.8L C200 03-15 L4 1.8L C230 03-05 L4 1.8L C250 11 L4 1.8L SLK200 11-15 L4 1.8L</p>	<p>WIX 57009 PROTEC FRAM CH9918 GONHER MANN HU514X INTERFIL OF9918</p> <hr/> <p>ALTURA 157mm D.EXTERNO 46mm D.INTERNO 22mm</p>

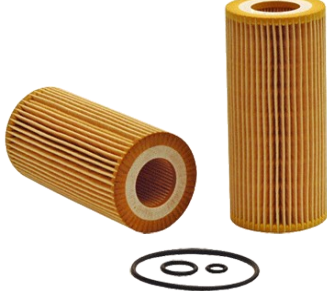	<p>C63 AMG 08-15 V8 6.3L CL63 AMG 08-10 V8 6.3L CLK63 AMG 07-09 V8 6.3L CLS63 AMG 07-17 V8 6.3L 5.5L E63 AMG 07-11 V8 6.3L ML63 AMG 07-12 V8 5.5L 6.3L S63 AMG 08-12 V8 6.3L SL63 AMG 09-12 V8 6.3L SLS AMG 11-15 V8 6.2L 6.3L</p>	<p>WIX 57010 PROTEC FRAM CH11051 GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 125mm D.EXTERNO 73mm D.INTERNO 9mm/35mm</p>
	<p>C300 13-14 V6 3.5L C350 12-14 V6 3.5L C400 15 V6 3.0L C43 AMG 17 V6 3.0L CLS 350 12-14 V6 3.5L CLS400 16-17 V6 3.0L CLS550 12-17 V8 4.6L E300 16-17 L4 2.0L V6 3.5L E350 12-16 V6 3.5L GL450 13-16 V6 3.0L V8 4.6L GLE350 16-17 V6 3.5L GLK350 13-17 V6 3.5L GLK450 V6 3.0L ML350 12-15 V6 3.5L ML400 V6 4.0L S550 12-17 V8 4.6L SL400 15-16 V6 3.0L SLK350 12-16 V6 3.5L</p>	<p>WIX 57059 PROTEC 723 FRAM CH11060 GONHER MANN HU7025Z INTERFIL</p> <hr/> <p>ALTURA 166mm D.EXTERNO 65mm D.INTERNO 22mm/24mm</p>
	<p>CLS350 11 V6 3.0L E320 07-09 V6 3.0L E350 11-13 V6 3.0L GL320 07-09 V6 3.0L GL350 10-17 V6 3.0L ML300 11 V6 3.0L ML350 10-14 V6 3.0L R350 10-13 V6 3.0L S350 11-13 V6 3.0L SPRINTER 2500 3500 16-17 V6 3.0L SPRINTER VAN 07-17 07-17 V6 3.0L</p>	<p>WIX 57062 PROTEC 722 FRAM CH10323 GONHER MANN HU821/X INTERFIL</p> <hr/> <p>ALTURA 95mm D.EXTERNO 71mm D.INTERNO 31mm</p>
	<p>A160 00-05 L4 1.6L A190 00-05 L4 1.9L A210 04 L4 2.1L Vaneo 02 L4 1.9L</p>	<p>WIX WL7227 PROTEC FRAM CH8776 GONHER G910 MANN HU610X INTERFIL OF8776</p> <hr/> <p>ALTURA 78mm D.EXTERNO 52mm/CERRADO D.INTERNO 21mm</p>
	<p>E320 04-06 L6 3.2L</p>	<p>WIX 57328 PROTEC FRAM CH9232 GONHER MANN HU721/2X INTERFIL</p> <hr/> <p>ALTURA 135mm D.EXTERNO 64mm D.INTERNO 31mm</p>
	<p>A140 00-04 L4 1.6L C280 08 V6 3.0L S500 06-08 V8 5.5L SPRINTER VAN 04-13 L4 2.1L L5 2.7L VITO 03-12 L4 2.1L</p>	<p>WIX 57038 PROTEC 720 FRAM CH9301 GONHER G910 MANN HU610X INTERFIL OF8776</p> <hr/> <p>ALTURA 115mm D.EXTERNO 63mm D.INTERNO 31mm</p>

	<p>E400 03-08 V8 S400 00-05 V8 ML400 01-05 V8 G400 00-14 V8</p>	<p>WIX PROTEC FRAM CH9801 GONHER MANN HU934X INTERFIL</p> <hr/> <p>ALTURA 149mm D.EXTERNO 83mm D.INTERNO 33mm</p>
	<p>A200 13-15 L4 1.6L A250 13-14 L4 2.0L B180 12-15 L4 1.6L B250 13-15 L4 2.0L C250 16 L4 1.8L C300 15-17 L4 2.0L C350 17 L4 2.0L CLA200 13-16 L4 1.6L CLA250 13-18 L4 2.0L E200 15 L4 3.0L E250 14-15 L4 2.0L GLA200 14-16 L4 1.6L GLA250 14-18 L4 2.0L GLC300 16-17 L4 2.0L SLK300 16 L4 2.0L V6 3.0L</p>	<p>WIX WL7515 PROTEC FRAM GONHER MANN HU711/6Z INTERFIL OF7116</p> <hr/> <p>ALTURA 87mm D.EXTERNO 71mm/65mm D.INTERNO 31mm/28mm</p>
	<p>C250 12-15 L4 1.8L SLK250 12-15 L4 1.8L</p>	<p>WIX WL10059 PROTEC FRAM GONHER MANN HU514 INTERFIL</p> <hr/> <p>ALTURA 158mm D.EXTERNO 46mm D.INTERNO 21mm</p>
	<p>C63 (15-20) V8 4.6L CL63 (11-14) V8 5.5L E63 (12-18) V8 4.0L GL 450 550 (13-16) V8 4.6L ML (12-15) V8 4.6L</p>	<p>WIX WL10077 PROTEC FRAM GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 145mm D.EXTERNO 57mm D.INTERNO 9mm 25mm</p>



	<p align="center">COOPER 02-08 L4 1.6L</p>	<table border="0"> <tr><td>WIX</td><td>57303</td></tr> <tr><td>PROTEC</td><td>155</td></tr> <tr><td>FRAM</td><td>CH9584</td></tr> <tr><td>GONHER</td><td>G446</td></tr> <tr><td>MANN</td><td>HU816/1X</td></tr> <tr><td>INTERFIL</td><td>OF9584</td></tr> <tr><td>ALTURA</td><td>81mm</td></tr> <tr><td>D.EXTERNO</td><td>72mm</td></tr> <tr><td>D.INTERNO</td><td>22mm/32mm</td></tr> </table>	WIX	57303	PROTEC	155	FRAM	CH9584	GONHER	G446	MANN	HU816/1X	INTERFIL	OF9584	ALTURA	81mm	D.EXTERNO	72mm	D.INTERNO	22mm/32mm
WIX	57303																			
PROTEC	155																			
FRAM	CH9584																			
GONHER	G446																			
MANN	HU816/1X																			
INTERFIL	OF9584																			
ALTURA	81mm																			
D.EXTERNO	72mm																			
D.INTERNO	22mm/32mm																			
	<p align="center">CLUBMAN JCW 09-13 L4 1.6L CLUBMAN S 08-13 L4 1.6L COOPER 07-16 L4 1.6L COOPER COUNTRYMAN 11-16 L4 1.6L COOPER JCW 09-13 L4 1.6L PACEMAN 13-16 L4 1.6L</p>	<table border="0"> <tr><td>WIX</td><td>57512</td></tr> <tr><td>PROTEC</td><td>812</td></tr> <tr><td>FRAM</td><td>CH10066/CH9973</td></tr> <tr><td>GONHER</td><td>G341</td></tr> <tr><td>MANN</td><td>HU711/51X</td></tr> <tr><td>INTERFIL</td><td>OF11Z1</td></tr> <tr><td>ALTURA</td><td>69mm</td></tr> <tr><td>D.EXTERNO</td><td>64mm</td></tr> <tr><td>D.INTERNO</td><td>21mm/29mm</td></tr> </table>	WIX	57512	PROTEC	812	FRAM	CH10066/CH9973	GONHER	G341	MANN	HU711/51X	INTERFIL	OF11Z1	ALTURA	69mm	D.EXTERNO	64mm	D.INTERNO	21mm/29mm
WIX	57512																			
PROTEC	812																			
FRAM	CH10066/CH9973																			
GONHER	G341																			
MANN	HU711/51X																			
INTERFIL	OF11Z1																			
ALTURA	69mm																			
D.EXTERNO	64mm																			
D.INTERNO	21mm/29mm																			
	<p align="center">COOPER (14-20) L3 1.5L L4 2.0L CLUBMAN (16-20) L3 1.5L L4 2.0L COUNTRYMAN (17-20) L3 1.5L L4 2.0L</p>	<table border="0"> <tr><td>WIX</td><td>WL7522</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td></td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td></td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>125MM</td></tr> <tr><td>D.EXTERNO</td><td>53MM</td></tr> <tr><td>D.INTERNO</td><td>26MM 23MM</td></tr> </table>	WIX	WL7522	PROTEC		FRAM		GONHER		MANN		INTERFIL		ALTURA	125MM	D.EXTERNO	53MM	D.INTERNO	26MM 23MM
WIX	WL7522																			
PROTEC																				
FRAM																				
GONHER																				
MANN																				
INTERFIL																				
ALTURA	125MM																			
D.EXTERNO	53MM																			
D.INTERNO	26MM 23MM																			



	<p>NP300 11-13 L4 2.5L PICK UP 08-09 L4 2.5L PICK UP NP300 08-13 L4 2.5L</p>	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL7302</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td></td> </tr> <tr> <td>GONHER</td> <td>G25</td> </tr> <tr> <td>MANN</td> <td>HU819/1X</td> </tr> <tr> <td>INTERFIL</td> <td>OF200</td> </tr> <tr> <td>ALTURA</td> <td>73mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>73mm/CERRADO</td> </tr> <tr> <td>D.INTERNO</td> <td>26mm</td> </tr> </tbody> </table>	WIX	WL7302	PROTEC		FRAM		GONHER	G25	MANN	HU819/1X	INTERFIL	OF200	ALTURA	73mm	D.EXTERNO	73mm/CERRADO	D.INTERNO	26mm
WIX	WL7302																			
PROTEC																				
FRAM																				
GONHER	G25																			
MANN	HU819/1X																			
INTERFIL	OF200																			
ALTURA	73mm																			
D.EXTERNO	73mm/CERRADO																			
D.INTERNO	26mm																			
	<p>URVAN 08-13 L4 3.0L DIESEL</p>	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL7418</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH9540</td> </tr> <tr> <td>GONHER</td> <td>G5208</td> </tr> <tr> <td>MANN</td> <td>HU825X</td> </tr> <tr> <td>INTERFIL</td> <td>OF2092</td> </tr> <tr> <td>ALTURA</td> <td>103mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>77mm</td> </tr> <tr> <td>D.INTERNO</td> <td>29mm</td> </tr> </tbody> </table>	WIX	WL7418	PROTEC		FRAM	CH9540	GONHER	G5208	MANN	HU825X	INTERFIL	OF2092	ALTURA	103mm	D.EXTERNO	77mm	D.INTERNO	29mm
WIX	WL7418																			
PROTEC																				
FRAM	CH9540																			
GONHER	G5208																			
MANN	HU825X																			
INTERFIL	OF2092																			
ALTURA	103mm																			
D.EXTERNO	77mm																			
D.INTERNO	29mm																			
	<p>INFINITI Q30 17 L4 2.0L Q50 16-17 L4 2.0L Q60 17 L4 2.0L QX30 17 L4 2.0L</p>	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL7515</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td></td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>HU711/6Z</td> </tr> <tr> <td>INTERFIL</td> <td>OF7116</td> </tr> <tr> <td>ALTURA</td> <td>87mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>71mm/65mm</td> </tr> <tr> <td>D.INTERNO</td> <td>31mm/28mm</td> </tr> </tbody> </table>	WIX	WL7515	PROTEC		FRAM		GONHER		MANN	HU711/6Z	INTERFIL	OF7116	ALTURA	87mm	D.EXTERNO	71mm/65mm	D.INTERNO	31mm/28mm
WIX	WL7515																			
PROTEC																				
FRAM																				
GONHER																				
MANN	HU711/6Z																			
INTERFIL	OF7116																			
ALTURA	87mm																			
D.EXTERNO	71mm/65mm																			
D.INTERNO	31mm/28mm																			






PEUGEOT


	<p>2008 14-16 L4 1.6L 206 00-09 L4 1.4L 1.6L 207 07-14 L4 1.4L 1.6L 208 14-16 L4 1.6L 3008 10-17 L4 1.6L 301 13-15 L4 1.6L 307 07-09 L4 1.4L 1.6L 2.0L 308 07-17 L4 1.4L 1.6L 2.0L 407 04-09 L4 2.0L 2.2L 508 12-16 L4 1.6L EXPERT 08-09 L4 2.0L EXPERT TEEPEE 07-12 L4 2.0L MANAGER 12-16 L4 2.2L PARTNER 04-08 L4 1.6L RCZ 12-17 L4 1.6L</p>	<table border="1"> <tr><td>WIX</td><td>57512</td></tr> <tr><td>PROTEC</td><td>812</td></tr> <tr><td>FRAM</td><td>CH10066/CH9973</td></tr> <tr><td>GONHER</td><td>G341</td></tr> <tr><td>MANN</td><td>HU711/51X</td></tr> <tr><td>INTERFIL</td><td>OF11Z1</td></tr> <tr><td>ALTURA</td><td>69mm</td></tr> <tr><td>D.EXTERNO</td><td>64mm</td></tr> <tr><td>D.INTERNO</td><td>21mm/29mm</td></tr> </table>	WIX	57512	PROTEC	812	FRAM	CH10066/CH9973	GONHER	G341	MANN	HU711/51X	INTERFIL	OF11Z1	ALTURA	69mm	D.EXTERNO	64mm	D.INTERNO	21mm/29mm
WIX	57512																			
PROTEC	812																			
FRAM	CH10066/CH9973																			
GONHER	G341																			
MANN	HU711/51X																			
INTERFIL	OF11Z1																			
ALTURA	69mm																			
D.EXTERNO	64mm																			
D.INTERNO	21mm/29mm																			
	<p>407 05-09 V6 2.7L 607 05-09 V6 2.7L</p>	<table border="1"> <tr><td>WIX</td><td>WL7454</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH10035</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU934/1X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>151mm</td></tr> <tr><td>D.EXTERNO</td><td>82mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>29mm/25mm</td></tr> </table>	WIX	WL7454	PROTEC		FRAM	CH10035	GONHER		MANN	HU934/1X	INTERFIL		ALTURA	151mm	D.EXTERNO	82mm/CERRADO	D.INTERNO	29mm/25mm
WIX	WL7454																			
PROTEC																				
FRAM	CH10035																			
GONHER																				
MANN	HU934/1X																			
INTERFIL																				
ALTURA	151mm																			
D.EXTERNO	82mm/CERRADO																			
D.INTERNO	29mm/25mm																			
	<p>206 00-07 L4 1.1L 1.4L 1.6L GRAND RAID 07-12 L4 1.6L PARTNER 02-10 L4 1.6L</p>	<table border="1"> <tr><td>WIX</td><td>WL7299</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9443</td></tr> <tr><td>GONHER</td><td>G141</td></tr> <tr><td>MANN</td><td>HU612X</td></tr> <tr><td>INTERFIL</td><td>OF1109</td></tr> <tr><td>ALTURA</td><td>141mm</td></tr> <tr><td>D.EXTERNO</td><td>59mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>14mm/22mm</td></tr> </table>	WIX	WL7299	PROTEC		FRAM	CH9443	GONHER	G141	MANN	HU612X	INTERFIL	OF1109	ALTURA	141mm	D.EXTERNO	59mm/CERRADO	D.INTERNO	14mm/22mm
WIX	WL7299																			
PROTEC																				
FRAM	CH9443																			
GONHER	G141																			
MANN	HU612X																			
INTERFIL	OF1109																			
ALTURA	141mm																			
D.EXTERNO	59mm/CERRADO																			
D.INTERNO	14mm/22mm																			
	<p>206 04-09 L4 1.4L 1.6L 207 06-07 L4 1.4L 1.6L 301 16 L4 1.6L 307 07-09 L4 1.6L 308 07-09 L4 1.6L 407 04-09 L4 1.6L PARTNER 09-17 L4 1.6L</p>	<table border="1"> <tr><td>WIX</td><td>WL7305</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9657</td></tr> <tr><td>GONHER</td><td>G241</td></tr> <tr><td>MANN</td><td>HU716/2X</td></tr> <tr><td>INTERFIL</td><td>OF11Z5</td></tr> <tr><td>ALTURA</td><td>100mm</td></tr> <tr><td>D.EXTERNO</td><td>72mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>26mm</td></tr> </table>	WIX	WL7305	PROTEC		FRAM	CH9657	GONHER	G241	MANN	HU716/2X	INTERFIL	OF11Z5	ALTURA	100mm	D.EXTERNO	72mm/CERRADO	D.INTERNO	26mm
WIX	WL7305																			
PROTEC																				
FRAM	CH9657																			
GONHER	G241																			
MANN	HU716/2X																			
INTERFIL	OF11Z5																			
ALTURA	100mm																			
D.EXTERNO	72mm/CERRADO																			
D.INTERNO	26mm																			
	<p>205 90 L4 1.8L PARTNER GRAN RAID 06-10 L4 1.6L</p>	<table border="1"> <tr><td>WIX</td><td>WL10008</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH11490</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU8005Z</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>128mm</td></tr> <tr><td>D.EXTERNO</td><td>71mm/76mm</td></tr> <tr><td>D.INTERNO</td><td>29mm/25mm</td></tr> </table>	WIX	WL10008	PROTEC		FRAM	CH11490	GONHER		MANN	HU8005Z	INTERFIL		ALTURA	128mm	D.EXTERNO	71mm/76mm	D.INTERNO	29mm/25mm
WIX	WL10008																			
PROTEC																				
FRAM	CH11490																			
GONHER																				
MANN	HU8005Z																			
INTERFIL																				
ALTURA	128mm																			
D.EXTERNO	71mm/76mm																			
D.INTERNO	29mm/25mm																			



PORSCHE

	<p>CAYENNE 04-10 V6 3.2L 3.6L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>51212</td></tr> <tr><td>PROTEC</td><td>194</td></tr> <tr><td>FRAM</td><td>CH8158</td></tr> <tr><td>GONHER</td><td>G112</td></tr> <tr><td>MANN</td><td>HU932/6</td></tr> <tr><td>INTERFIL</td><td>OF8158</td></tr> <tr><td>ALTURA</td><td>109mm</td></tr> <tr><td>D.EXTERNO</td><td>83mm</td></tr> <tr><td>D.INTERNO</td><td>21mm/38mm</td></tr> </tbody> </table>	WIX	51212	PROTEC	194	FRAM	CH8158	GONHER	G112	MANN	HU932/6	INTERFIL	OF8158	ALTURA	109mm	D.EXTERNO	83mm	D.INTERNO	21mm/38mm
WIX	51212																			
PROTEC	194																			
FRAM	CH8158																			
GONHER	G112																			
MANN	HU932/6																			
INTERFIL	OF8158																			
ALTURA	109mm																			
D.EXTERNO	83mm																			
D.INTERNO	21mm/38mm																			
	<p>CAYENNE 11-17 V6 3.0L PANAMERA 12-13 V6 3.0L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>57204</td></tr> <tr><td>PROTEC</td><td>715</td></tr> <tr><td>FRAM</td><td>CH10160</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU729Z</td></tr> <tr><td>INTERFIL</td><td>OF10160</td></tr> <tr><td>ALTURA</td><td>155mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>32mm</td></tr> </tbody> </table>	WIX	57204	PROTEC	715	FRAM	CH10160	GONHER		MANN	HU729Z	INTERFIL	OF10160	ALTURA	155mm	D.EXTERNO	65mm	D.INTERNO	32mm
WIX	57204																			
PROTEC	715																			
FRAM	CH10160																			
GONHER																				
MANN	HU729Z																			
INTERFIL	OF10160																			
ALTURA	155mm																			
D.EXTERNO	65mm																			
D.INTERNO	32mm																			
	<p>911 01-11 H6 3.4L 3.6L 3.8L 4.0L BOXSTER 97-08 H6 2.5L 2.7L 3.2L 3.4L CARRERA GT 04-05 V10 5.7L CAYENNE 03-06 V8 4.5L CAYMAN 06-08 H6 2.7L 3.4L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>57211</td></tr> <tr><td>PROTEC</td><td>725</td></tr> <tr><td>FRAM</td><td>CH8278</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU719/5X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>113mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>24mm</td></tr> </tbody> </table>	WIX	57211	PROTEC	725	FRAM	CH8278	GONHER		MANN	HU719/5X	INTERFIL		ALTURA	113mm	D.EXTERNO	65mm	D.INTERNO	24mm
WIX	57211																			
PROTEC	725																			
FRAM	CH8278																			
GONHER																				
MANN	HU719/5X																			
INTERFIL																				
ALTURA	113mm																			
D.EXTERNO	65mm																			
D.INTERNO	24mm																			
	<p>CAYENNE 11-17 V6 3.6L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>57462</td></tr> <tr><td>PROTEC</td><td>126</td></tr> <tr><td>FRAM</td><td>CH11242</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td></td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>119mm</td></tr> <tr><td>D.EXTERNO</td><td>81mm</td></tr> <tr><td>D.INTERNO</td><td>CERRADO/17mm</td></tr> </tbody> </table>	WIX	57462	PROTEC	126	FRAM	CH11242	GONHER		MANN		INTERFIL		ALTURA	119mm	D.EXTERNO	81mm	D.INTERNO	CERRADO/17mm
WIX	57462																			
PROTEC	126																			
FRAM	CH11242																			
GONHER																				
MANN																				
INTERFIL																				
ALTURA	119mm																			
D.EXTERNO	81mm																			
D.INTERNO	CERRADO/17mm																			
	<p>CAYENNE 13-16 V6 3.0L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>WL10008</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH11490</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU8005Z</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>128mm</td></tr> <tr><td>D.EXTERNO</td><td>71mm/76mm</td></tr> <tr><td>D.INTERNO</td><td>29mm/25mm</td></tr> </tbody> </table>	WIX	WL10008	PROTEC		FRAM	CH11490	GONHER		MANN	HU8005Z	INTERFIL		ALTURA	128mm	D.EXTERNO	71mm/76mm	D.INTERNO	29mm/25mm
WIX	WL10008																			
PROTEC																				
FRAM	CH11490																			
GONHER																				
MANN	HU8005Z																			
INTERFIL																				
ALTURA	128mm																			
D.EXTERNO	71mm/76mm																			
D.INTERNO	29mm/25mm																			

	MACAN 17 V6 3.6L	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL10024</td> </tr> <tr> <td>PROTEC</td> <td>711</td> </tr> <tr> <td>FRAM</td> <td>CH11784</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>HU6002Z</td> </tr> <tr> <td>INTERFIL</td> <td>OF6115</td> </tr> <tr> <td>ALTURA</td> <td>112mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>52mm</td> </tr> <tr> <td>D.INTERNO</td> <td>24mm</td> </tr> </tbody> </table>	WIX	WL10024	PROTEC	711	FRAM	CH11784	GONHER		MANN	HU6002Z	INTERFIL	OF6115	ALTURA	112mm	D.EXTERNO	52mm	D.INTERNO	24mm
WIX	WL10024																			
PROTEC	711																			
FRAM	CH11784																			
GONHER																				
MANN	HU6002Z																			
INTERFIL	OF6115																			
ALTURA	112mm																			
D.EXTERNO	52mm																			
D.INTERNO	24mm																			
	BOXSTER 09-16 H6 2.7L 2.9L 3.4L 3.8L CAYMAN 09-16 H6 2.7L 2.9L 3.4L 3.8L	<table border="1"> <tbody> <tr> <td>WIX</td> <td>57070</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH11008</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td></td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>140mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>65mm</td> </tr> <tr> <td>D.INTERNO</td> <td>31mm</td> </tr> </tbody> </table>	WIX	57070	PROTEC		FRAM	CH11008	GONHER		MANN		INTERFIL		ALTURA	140mm	D.EXTERNO	65mm	D.INTERNO	31mm
WIX	57070																			
PROTEC																				
FRAM	CH11008																			
GONHER																				
MANN																				
INTERFIL																				
ALTURA	140mm																			
D.EXTERNO	65mm																			
D.INTERNO	31mm																			
	911 (09-20) H6 3.0L 3.4L 3.8L CAYENNE (08-18) V6 3.6L V8 4.8L MACAN (15-18) V6 3.0L 3.6L PANAMERA (11-16) V6 3.0L 3.6L V8 4.8L	<table border="1"> <tbody> <tr> <td>WIX</td> <td>WL10372</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td></td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td></td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>109mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>83mm</td> </tr> <tr> <td>D.INTERNO</td> <td>29mm</td> </tr> </tbody> </table>	WIX	WL10372	PROTEC		FRAM		GONHER		MANN		INTERFIL		ALTURA	109mm	D.EXTERNO	83mm	D.INTERNO	29mm
WIX	WL10372																			
PROTEC																				
FRAM																				
GONHER																				
MANN																				
INTERFIL																				
ALTURA	109mm																			
D.EXTERNO	83mm																			
D.INTERNO	29mm																			

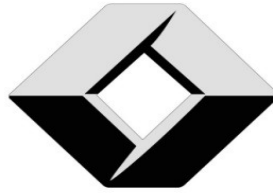

RENAULT



KANGOO 01-14 L4 1.2L

WIX	WL7293
PROTEC	
FRAM	CH9437
GONHER	
MANN	HU611X
INTERFIL	
ALTURA	87mm
D.EXTERNO	52mm/CERRADO
D.INTERNO	24mm



	<p>9-3 06-10 V6 2.8L 9-4X 11 V6 2.8L 9-5 10-12 V6 2.8L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>57090</td></tr> <tr><td>PROTEC</td><td>176</td></tr> <tr><td>FRAM</td><td>CH8765</td></tr> <tr><td>GONHER</td><td>G765</td></tr> <tr><td>MANN</td><td></td></tr> <tr><td>INTERFIL</td><td>OF8765</td></tr> <tr><td>ALTURA</td><td>98mm</td></tr> <tr><td>D.EXTERNO</td><td>53mm</td></tr> <tr><td>D.INTERNO</td><td>20mm</td></tr> </tbody> </table>	WIX	57090	PROTEC	176	FRAM	CH8765	GONHER	G765	MANN		INTERFIL	OF8765	ALTURA	98mm	D.EXTERNO	53mm	D.INTERNO	20mm
WIX	57090																			
PROTEC	176																			
FRAM	CH8765																			
GONHER	G765																			
MANN																				
INTERFIL	OF8765																			
ALTURA	98mm																			
D.EXTERNO	53mm																			
D.INTERNO	20mm																			
	<p>9-3 03-12 L4 2.0L 9-5 11-12 L4 2.0L</p>	<table border="1"> <tbody> <tr><td>WIX</td><td>57082</td></tr> <tr><td>PROTEC</td><td>182</td></tr> <tr><td>FRAM</td><td>CH9018</td></tr> <tr><td>GONHER</td><td>G49</td></tr> <tr><td>MANN</td><td>ML1015</td></tr> <tr><td>INTERFIL</td><td>OF9018</td></tr> <tr><td>ALTURA</td><td>89mm</td></tr> <tr><td>D.EXTERNO</td><td>68mm</td></tr> <tr><td>D.INTERNO</td><td>10mm/35mm</td></tr> </tbody> </table>	WIX	57082	PROTEC	182	FRAM	CH9018	GONHER	G49	MANN	ML1015	INTERFIL	OF9018	ALTURA	89mm	D.EXTERNO	68mm	D.INTERNO	10mm/35mm
WIX	57082																			
PROTEC	182																			
FRAM	CH9018																			
GONHER	G49																			
MANN	ML1015																			
INTERFIL	OF9018																			
ALTURA	89mm																			
D.EXTERNO	68mm																			
D.INTERNO	10mm/35mm																			




	<p>IBIZA 12-15 L4 1.6L</p>	<table border="1"> <tr><td>WIX</td><td>57262</td></tr> <tr><td>PROTEC</td><td>790</td></tr> <tr><td>FRAM</td><td>CH10759</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU7008Z</td></tr> <tr><td>INTERFIL</td><td>OF3L62</td></tr> <tr><td>ALTURA</td><td>100mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>20mm/23mm</td></tr> </table>	WIX	57262	PROTEC	790	FRAM	CH10759	GONHER		MANN	HU7008Z	INTERFIL	OF3L62	ALTURA	100mm	D.EXTERNO	65mm	D.INTERNO	20mm/23mm
WIX	57262																			
PROTEC	790																			
FRAM	CH10759																			
GONHER																				
MANN	HU7008Z																			
INTERFIL	OF3L62																			
ALTURA	100mm																			
D.EXTERNO	65mm																			
D.INTERNO	20mm/23mm																			
	<p>ALTEA 04-09 L4 1.9L IBIZA 02-09 L4 1.4L 1.9L</p>	<table border="1"> <tr><td>WIX</td><td>57083</td></tr> <tr><td>PROTEC</td><td>783</td></tr> <tr><td>FRAM</td><td>CH9461</td></tr> <tr><td>GONHER</td><td>G466</td></tr> <tr><td>MANN</td><td>HU719/7X</td></tr> <tr><td>INTERFIL</td><td>OF9461</td></tr> <tr><td>ALTURA</td><td>142mm</td></tr> <tr><td>D.EXTERNO</td><td>71mm</td></tr> <tr><td>D.INTERNO</td><td>CERRADO/29mm</td></tr> </table>	WIX	57083	PROTEC	783	FRAM	CH9461	GONHER	G466	MANN	HU719/7X	INTERFIL	OF9461	ALTURA	142mm	D.EXTERNO	71mm	D.INTERNO	CERRADO/29mm
WIX	57083																			
PROTEC	783																			
FRAM	CH9461																			
GONHER	G466																			
MANN	HU719/7X																			
INTERFIL	OF9461																			
ALTURA	142mm																			
D.EXTERNO	71mm																			
D.INTERNO	CERRADO/29mm																			
	<p>ALTEA 04-10 L4 2.0L EXEO 11 L4 2.0L LEON 06-15 L4 2.0L LEON CUPRA 16 L4 2.0L TOLEDO 06-08 L4 2.0L</p>	<table border="1"> <tr><td>WIX</td><td>57187</td></tr> <tr><td>PROTEC</td><td>787</td></tr> <tr><td>FRAM</td><td>CH9911</td></tr> <tr><td>GONHER</td><td>G313</td></tr> <tr><td>MANN</td><td>HU719/6X</td></tr> <tr><td>INTERFIL</td><td>OF5562</td></tr> <tr><td>ALTURA</td><td>125mm</td></tr> <tr><td>D.EXTERNO</td><td>64mm</td></tr> <tr><td>D.INTERNO</td><td>31mm</td></tr> </table>	WIX	57187	PROTEC	787	FRAM	CH9911	GONHER	G313	MANN	HU719/6X	INTERFIL	OF5562	ALTURA	125mm	D.EXTERNO	64mm	D.INTERNO	31mm
WIX	57187																			
PROTEC	787																			
FRAM	CH9911																			
GONHER	G313																			
MANN	HU719/6X																			
INTERFIL	OF5562																			
ALTURA	125mm																			
D.EXTERNO	64mm																			
D.INTERNO	31mm																			
	<p>ALHAMBRA 01-08 L4 1.9L V6 2.8L IBIZA 00-02 L4 1.9L</p>	<table border="1"> <tr><td>WIX</td><td>57210</td></tr> <tr><td>PROTEC</td><td>191</td></tr> <tr><td>FRAM</td><td>CH8530</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU726/2X</td></tr> <tr><td>INTERFIL</td><td>OF8530</td></tr> <tr><td>ALTURA</td><td>154mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>24mm</td></tr> </table>	WIX	57210	PROTEC	191	FRAM	CH8530	GONHER		MANN	HU726/2X	INTERFIL	OF8530	ALTURA	154mm	D.EXTERNO	65mm	D.INTERNO	24mm
WIX	57210																			
PROTEC	191																			
FRAM	CH8530																			
GONHER																				
MANN	HU726/2X																			
INTERFIL	OF8530																			
ALTURA	154mm																			
D.EXTERNO	65mm																			
D.INTERNO	24mm																			
	<p>IBIZA 02-05 L4 1.2L</p>	<table border="1"> <tr><td>WIX</td><td>WL7318</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9530</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU710x</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>62mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>32mm</td></tr> </table>	WIX	WL7318	PROTEC		FRAM	CH9530	GONHER		MANN	HU710x	INTERFIL		ALTURA	62mm	D.EXTERNO	65mm/CERRADO	D.INTERNO	32mm
WIX	WL7318																			
PROTEC																				
FRAM	CH9530																			
GONHER																				
MANN	HU710x																			
INTERFIL																				
ALTURA	62mm																			
D.EXTERNO	65mm/CERRADO																			
D.INTERNO	32mm																			




ALTEA 07 L4 1.4L IBIZA 08-16 L4 1.6L LEON 08 L4 1.4L

WIX	WL7410
PROTEC	
FRAM	CH9706
GONHER	G562
MANN	HU712/6X
INTERFIL	OF3C11
ALTURA	72mm
D.EXTERNO	65mm/CERRADO
D.INTERNO	9mm/33mm



 A photograph showing two cylindrical oil filters and a circular gasket. One filter is shown from a side-on perspective, revealing its pleated internal structure. The other is shown from the top, showing the mounting flange. The gasket is a simple black ring.	FORTWO 05-11 L3 0.8L	<table border="1"><tr><td>WIX</td><td>57077</td></tr><tr><td>PROTEC</td><td></td></tr><tr><td>FRAM</td><td>CH9024</td></tr><tr><td>GONHER</td><td></td></tr><tr><td>MANN</td><td>HU68X</td></tr><tr><td>INTERFIL</td><td>OF1601</td></tr><tr><td>ALTURA</td><td>55mm</td></tr><tr><td>D.EXTERNO</td><td>52mm</td></tr><tr><td>D.INTERNO</td><td>22mm</td></tr></table>	WIX	57077	PROTEC		FRAM	CH9024	GONHER		MANN	HU68X	INTERFIL	OF1601	ALTURA	55mm	D.EXTERNO	52mm	D.INTERNO	22mm
WIX	57077																			
PROTEC																				
FRAM	CH9024																			
GONHER																				
MANN	HU68X																			
INTERFIL	OF1601																			
ALTURA	55mm																			
D.EXTERNO	52mm																			
D.INTERNO	22mm																			



	SWIFT 09 L4 1.6L	WIX	57674
		PROTEC	774
		FRAM	CH10246
		GONHER	G3751
		MANN	HU612/2X
		INTERFIL	OF10246
		ALTURA	106mm
		D.EXTERNO	57mm
		D.INTERNO	10mm/26mm








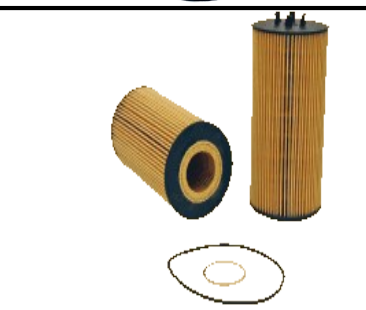
TOYOTA







	<p>C-HR 18 L4 2.0L COROLLA 09-18 L4 1.8L MATRIX 09-14 L4 1.8L NOAH 07 L4 2.0L PRIUS 10-17 L4 1.8L</p>	<p>WIX 57064 PROTEC 118 FRAM CH10358 GONHER G911 MANN INTERFIL OF10358 ALTURA 56mm D.EXTERNO 60mm D.INTERNO 28mm</p>
	<p>LAND CRUISER 08-17 V8 5.7L SEQUOIA 08-17 V8 4.6L 5.7L TUNDRA 10-17 V8 4.6L 5.7L</p>	<p>WIX 57041 PROTEC 122 FRAM CH10295 GONHER G917 MANN INTERFIL OF10295 ALTURA 111mm D.EXTERNO 70mm D.INTERNO 28mm</p>
	<p>AVALON 05-17 L4 2.5L V6 3.5L CAMRY 07-17 L4 2.5L V6 3.5L HIGHLANDER 08-18 L4 2.7L V6 3.5L RAV4 06-17 L4 2.5L V6 3.5L SIENNA 07-17 L4 2.7L V6 3.5L TACOMA 16-18 V6 3.5L VENZA 09-16 L4 2.7L V6 3.5L</p>	<p>WIX 57047 PROTEC 146 FRAM CH9972 GONHER G912 MANN ML1031 INTERFIL OF9972 ALTURA 67mm D.EXTERNO 70mm D.INTERNO 27mm</p>
	<p>4 RUNNER 10-17 V6 4.0L FJ CRUISER 10-14 V6 4.0L TUNDRA 12-14 V6 4.0L</p>	<p>WIX 57173 PROTEC 145 FRAM CH10158 GONHER MANN INTERFIL ALTURA 82mm D.EXTERNO 69mm D.INTERNO 28mm</p>
	<p>SUPRA 2020 L6 3.0L</p>	<p>WIX WL10342 PROTEC FRAM GONHER MANN INTERFIL ALTURA 155MM D.EXTERNO 54MM 56MM D.INTERNO 21MM</p>



Volkswagen

	<p>EUROVAN 96-02 V6 2.8L GOLF 96-02 V6 2.8L GTI 99 V6 2.8L JETTA 95-05 L4 1.8L V6 2.8L PASSAT 96-05 V6 2.8L V8 4.0L TOUAREG 04-11 V6 3.2L 3.6L</p>	<p>WIX 51212 PROTEC 194 FRAM CH8158 GONHER G112 MANN HU932/6 INTERFIL OF8158</p> <hr/> <p>ALTURA 109mm D.EXTERNO 83mm D.INTERNO 21mm/38mm</p>
	<p>TOUAREG 11-17 V6 3.0L</p>	<p>WIX 57204 PROTEC 715 FRAM CH10160 GONHER MANN HU729Z INTERFIL OF10160</p> <hr/> <p>ALTURA 155mm D.EXTERNO 65mm D.INTERNO 32mm</p>
	<p>AMAROK 10-15 L4 2.0L CRAFTER 13-15 L4 2.0L JETTA 10-16 L4 2.0L PASSAT 12-14 L4 2.0L TRANSPORTER 10-15 L4 2.0L TDI</p>	<p>WIX 57262 PROTEC 790 FRAM CH10759 GONHER MANN HU7008Z INTERFIL OF3L62</p> <hr/> <p>ALTURA 100mm D.EXTERNO 65mm D.INTERNO 20mm/23mm</p>
	<p>TOUAREG 07-14 V8 4.2L</p>	<p>WIX 57330 PROTEC FRAM CH10632 GONHER MANN HU718/8X INTERFIL</p> <hr/> <p>ALTURA 129mm D.EXTERNO 68mm D.INTERNO 26mm/20mm</p>
	<p>CC 13-17 V6 3.6L PASSAT 11-17 V6 3.6L TOUAREG 12-17 V6 3.6L</p>	<p>WIX 57462 PROTEC 126 FRAM CH11242 GONHER MANN INTERFIL</p> <hr/> <p>ALTURA 119mm D.EXTERNO 81mm D.INTERNO CERRADO/17mm</p>

	<p align="center">ROUTAN 11-13 V6 3.6L</p>	<table border="1"> <tr><td>WIX</td><td>57526</td></tr> <tr><td>PROTEC</td><td>726</td></tr> <tr><td>FRAM</td><td>CH10955</td></tr> <tr><td>GONHER</td><td>G3744</td></tr> <tr><td>MANN</td><td>HU6009Z</td></tr> <tr><td>INTERFIL</td><td>OF10955</td></tr> <tr><td>ALTURA</td><td>137mm</td></tr> <tr><td>D.EXTERNO</td><td>52mm</td></tr> <tr><td>D.INTERNO</td><td>9mm/22mm</td></tr> </table>	WIX	57526	PROTEC	726	FRAM	CH10955	GONHER	G3744	MANN	HU6009Z	INTERFIL	OF10955	ALTURA	137mm	D.EXTERNO	52mm	D.INTERNO	9mm/22mm
WIX	57526																			
PROTEC	726																			
FRAM	CH10955																			
GONHER	G3744																			
MANN	HU6009Z																			
INTERFIL	OF10955																			
ALTURA	137mm																			
D.EXTERNO	52mm																			
D.INTERNO	9mm/22mm																			
	<p align="center">ROUTAN 14 V6 3.6L</p>	<table border="1"> <tr><td>WIX</td><td>WL10010</td></tr> <tr><td>PROTEC</td><td>710</td></tr> <tr><td>FRAM</td><td>CH11665</td></tr> <tr><td>GONHER</td><td>G349</td></tr> <tr><td>MANN</td><td></td></tr> <tr><td>INTERFIL</td><td>OF11665</td></tr> <tr><td>ALTURA</td><td>156mm</td></tr> <tr><td>D.EXTERNO</td><td>50mm</td></tr> <tr><td>D.INTERNO</td><td>19mm/23mm</td></tr> </table>	WIX	WL10010	PROTEC	710	FRAM	CH11665	GONHER	G349	MANN		INTERFIL	OF11665	ALTURA	156mm	D.EXTERNO	50mm	D.INTERNO	19mm/23mm
WIX	WL10010																			
PROTEC	710																			
FRAM	CH11665																			
GONHER	G349																			
MANN																				
INTERFIL	OF11665																			
ALTURA	156mm																			
D.EXTERNO	50mm																			
D.INTERNO	19mm/23mm																			
	<p>BEETLE 12-14 L4 2.0L BORA 05-10 L4 1.9L CC 09-12 V6 3.6L EOS 07-08 V6 3.2L EUROVAN 01-09 L4 1.9L V6 2.8L GOLF 01-14 L4 1.9L 2.0L V6 2.8L 3.2L JETTA 05-14 L4 1.9L 2.0L V6 2.8L NEW BEETLE 98-05 L5 2.3L V6 3.2L PASSAT 06-12 L4 2.0L V6 3.6L POLO 03-06 L4 1.9L R32 08 V6 3.2L TRANSPORTER 11 L4 2.0L</p>	<table border="1"> <tr><td>WIX</td><td>57083</td></tr> <tr><td>PROTEC</td><td>783</td></tr> <tr><td>FRAM</td><td>CH9461</td></tr> <tr><td>GONHER</td><td>G466</td></tr> <tr><td>MANN</td><td>HU719/7X</td></tr> <tr><td>INTERFIL</td><td>OF9461</td></tr> <tr><td>ALTURA</td><td>142mm</td></tr> <tr><td>D.EXTERNO</td><td>71mm</td></tr> <tr><td>D.INTERNO</td><td>CERRADO/29mm</td></tr> </table>	WIX	57083	PROTEC	783	FRAM	CH9461	GONHER	G466	MANN	HU719/7X	INTERFIL	OF9461	ALTURA	142mm	D.EXTERNO	71mm	D.INTERNO	CERRADO/29mm
WIX	57083																			
PROTEC	783																			
FRAM	CH9461																			
GONHER	G466																			
MANN	HU719/7X																			
INTERFIL	OF9461																			
ALTURA	142mm																			
D.EXTERNO	71mm																			
D.INTERNO	CERRADO/29mm																			
	<p>BEETLE 98-06 L4 1.9L CRAFT 08-12 L4 2.0L GOLF 97-07 L4 1.9L JETTA 99-08 L4 1.9L NEW BEETLE L4 1.9L PASSAT 98-05 L4 1.9L 2.0L</p>	<table border="1"> <tr><td>WIX</td><td>57210</td></tr> <tr><td>PROTEC</td><td>191</td></tr> <tr><td>FRAM</td><td>CH8530</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU726/2X</td></tr> <tr><td>INTERFIL</td><td>OF8530</td></tr> <tr><td>ALTURA</td><td>154mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>24mm</td></tr> </table>	WIX	57210	PROTEC	191	FRAM	CH8530	GONHER		MANN	HU726/2X	INTERFIL	OF8530	ALTURA	154mm	D.EXTERNO	65mm	D.INTERNO	24mm
WIX	57210																			
PROTEC	191																			
FRAM	CH8530																			
GONHER																				
MANN	HU726/2X																			
INTERFIL	OF8530																			
ALTURA	154mm																			
D.EXTERNO	65mm																			
D.INTERNO	24mm																			
	<p align="center">PASSAT 00-05 V6 2.5</p>	<table border="1"> <tr><td>WIX</td><td>WL7226</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH8980</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU842X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>199mm</td></tr> <tr><td>D.EXTERNO</td><td>72mm/CERRADO</td></tr> <tr><td>D.INTERNO</td><td>14mm/34mm</td></tr> </table>	WIX	WL7226	PROTEC		FRAM	CH8980	GONHER		MANN	HU842X	INTERFIL		ALTURA	199mm	D.EXTERNO	72mm/CERRADO	D.INTERNO	14mm/34mm
WIX	WL7226																			
PROTEC																				
FRAM	CH8980																			
GONHER																				
MANN	HU842X																			
INTERFIL																				
ALTURA	199mm																			
D.EXTERNO	72mm/CERRADO																			
D.INTERNO	14mm/34mm																			
	<p align="center">PHAETON 04-06 V8 4.2L</p>	<table border="1"> <tr><td>WIX</td><td>57329</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH9690</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU835/1X</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>144mm</td></tr> <tr><td>D.EXTERNO</td><td>73mm</td></tr> <tr><td>D.INTERNO</td><td>9mm/34mm</td></tr> </table>	WIX	57329	PROTEC		FRAM	CH9690	GONHER		MANN	HU835/1X	INTERFIL		ALTURA	144mm	D.EXTERNO	73mm	D.INTERNO	9mm/34mm
WIX	57329																			
PROTEC																				
FRAM	CH9690																			
GONHER																				
MANN	HU835/1X																			
INTERFIL																				
ALTURA	144mm																			
D.EXTERNO	73mm																			
D.INTERNO	9mm/34mm																			

	<p style="text-align: center;">TOUAREG 13-17 V6 3.0L</p>	<table border="1"> <tr> <td>WIX</td> <td>WL10008</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH11490</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>HU8005Z</td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>128mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>71mm/76mm</td> </tr> <tr> <td>D.INTERNO</td> <td>29mm</td> </tr> </table>	WIX	WL10008	PROTEC		FRAM	CH11490	GONHER		MANN	HU8005Z	INTERFIL		ALTURA	128mm	D.EXTERNO	71mm/76mm	D.INTERNO	29mm
WIX	WL10008																			
PROTEC																				
FRAM	CH11490																			
GONHER																				
MANN	HU8005Z																			
INTERFIL																				
ALTURA	128mm																			
D.EXTERNO	71mm/76mm																			
D.INTERNO	29mm																			
	<p style="text-align: center;">BEETLE 14-17 L4 1.8L 2.0L GOLF 15-17 L4 1.8L 2.0L GOLF ALLTRACK 17 L4 1.8L GOLF SPORTWAGEN 16-17 L4 1.8L GTI 15-17 L4 2.0L JETTA 14-17 L4 1.8L 2.0L PASSAT 14-17 L4 1.8L</p>	<table border="1"> <tr> <td>WIX</td> <td>WL10024</td> </tr> <tr> <td>PROTEC</td> <td>711</td> </tr> <tr> <td>FRAM</td> <td>CH11784</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>HU6002Z</td> </tr> <tr> <td>INTERFIL</td> <td>OF6115</td> </tr> <tr> <td>ALTURA</td> <td>112mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>52mm</td> </tr> <tr> <td>D.INTERNO</td> <td>24mm</td> </tr> </table>	WIX	WL10024	PROTEC	711	FRAM	CH11784	GONHER		MANN	HU6002Z	INTERFIL	OF6115	ALTURA	112mm	D.EXTERNO	52mm	D.INTERNO	24mm
WIX	WL10024																			
PROTEC	711																			
FRAM	CH11784																			
GONHER																				
MANN	HU6002Z																			
INTERFIL	OF6115																			
ALTURA	112mm																			
D.EXTERNO	52mm																			
D.INTERNO	24mm																			
	<p style="text-align: center;">BEETLE 15 L4 2.0L GOLF 15-17 L4 2.0L GOLF SPORTWAGEN 16 L4 2.0L JETTA 15 L4 2.0L PASSAT 15 L4 2.0L</p>	<table border="1"> <tr> <td>WIX</td> <td>WL10056</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH11675</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>HU7020Z</td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>103mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>65mm</td> </tr> <tr> <td>D.INTERNO</td> <td>CERRADO/31mm</td> </tr> </table>	WIX	WL10056	PROTEC		FRAM	CH11675	GONHER		MANN	HU7020Z	INTERFIL		ALTURA	103mm	D.EXTERNO	65mm	D.INTERNO	CERRADO/31mm
WIX	WL10056																			
PROTEC																				
FRAM	CH11675																			
GONHER																				
MANN	HU7020Z																			
INTERFIL																				
ALTURA	103mm																			
D.EXTERNO	65mm																			
D.INTERNO	CERRADO/31mm																			
	<p style="text-align: center;">BEETLE 06-14 L5 2.5L BORA 05-11 L5 2.5L GLI 07-08 L4 2.0L GOLF 07-13 L4 2.0L L5 2.5L GTI 06-08 L4 2.0L JETTA 05-16 L4 2.0L L5 2.5L PASSAT 05-17 L4 2.0L L5 2.5L</p>	<table border="1"> <tr> <td>WIX</td> <td>57187</td> </tr> <tr> <td>PROTEC</td> <td>787</td> </tr> <tr> <td>FRAM</td> <td>CH9911</td> </tr> <tr> <td>GONHER</td> <td>G313</td> </tr> <tr> <td>MANN</td> <td>HU719/6X</td> </tr> <tr> <td>INTERFIL</td> <td>OF5562</td> </tr> <tr> <td>ALTURA</td> <td>125mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>64mm</td> </tr> <tr> <td>D.INTERNO</td> <td>31mm</td> </tr> </table>	WIX	57187	PROTEC	787	FRAM	CH9911	GONHER	G313	MANN	HU719/6X	INTERFIL	OF5562	ALTURA	125mm	D.EXTERNO	64mm	D.INTERNO	31mm
WIX	57187																			
PROTEC	787																			
FRAM	CH9911																			
GONHER	G313																			
MANN	HU719/6X																			
INTERFIL	OF5562																			
ALTURA	125mm																			
D.EXTERNO	64mm																			
D.INTERNO	31mm																			
	<p style="text-align: center;">TOUAREG (09-12) V6 3.0L</p>	<table border="1"> <tr> <td>WIX</td> <td>57161</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td>CH10636</td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td>HU80001X</td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>200mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>75mm 71mm</td> </tr> <tr> <td>D.INTERNO</td> <td>28mm</td> </tr> </table>	WIX	57161	PROTEC		FRAM	CH10636	GONHER		MANN	HU80001X	INTERFIL		ALTURA	200mm	D.EXTERNO	75mm 71mm	D.INTERNO	28mm
WIX	57161																			
PROTEC																				
FRAM	CH10636																			
GONHER																				
MANN	HU80001X																			
INTERFIL																				
ALTURA	200mm																			
D.EXTERNO	75mm 71mm																			
D.INTERNO	28mm																			
	<p style="text-align: center;">JETTA (2017) L4 2.0L JETTA GLI (2020) L4 2.0L</p>	<table border="1"> <tr> <td>WIX</td> <td>WL10396</td> </tr> <tr> <td>PROTEC</td> <td></td> </tr> <tr> <td>FRAM</td> <td></td> </tr> <tr> <td>GONHER</td> <td></td> </tr> <tr> <td>MANN</td> <td></td> </tr> <tr> <td>INTERFIL</td> <td></td> </tr> <tr> <td>ALTURA</td> <td>112mm</td> </tr> <tr> <td>D.EXTERNO</td> <td>52mm</td> </tr> <tr> <td>D.INTERNO</td> <td>24mm</td> </tr> </table>	WIX	WL10396	PROTEC		FRAM		GONHER		MANN		INTERFIL		ALTURA	112mm	D.EXTERNO	52mm	D.INTERNO	24mm
WIX	WL10396																			
PROTEC																				
FRAM																				
GONHER																				
MANN																				
INTERFIL																				
ALTURA	112mm																			
D.EXTERNO	52mm																			
D.INTERNO	24mm																			



	<p>C30 08-13 L5 2.5L C70 06-13 L5 2.5L S40 04-11 L5 2.4L 2.5L S60 12-16 L5 2.5L V50 05-11 L5 2.4L 2.5L V60 15-16 L5 2.5L XC60 15-16 L5 2.5L XC70 16 L5 2.5L</p>	<table border="1"> <tr><td>WIX</td><td>57186</td></tr> <tr><td>PROTEC</td><td>786</td></tr> <tr><td>FRAM</td><td>CH9954</td></tr> <tr><td>GONHER</td><td>G570</td></tr> <tr><td>MANN</td><td>HU719/8X</td></tr> <tr><td>INTERFIL</td><td>OF9954</td></tr> <tr><td>ALTURA</td><td>125mm</td></tr> <tr><td>D.EXTERNO</td><td>65mm</td></tr> <tr><td>D.INTERNO</td><td>31mm</td></tr> </table>	WIX	57186	PROTEC	786	FRAM	CH9954	GONHER	G570	MANN	HU719/8X	INTERFIL	OF9954	ALTURA	125mm	D.EXTERNO	65mm	D.INTERNO	31mm
WIX	57186																			
PROTEC	786																			
FRAM	CH9954																			
GONHER	G570																			
MANN	HU719/8X																			
INTERFIL	OF9954																			
ALTURA	125mm																			
D.EXTERNO	65mm																			
D.INTERNO	31mm																			
	<p>C70 99-04 L5 2.3L 2.4L S40 00-04 L4 1.9L S60 01-09 L5 2.0L 2.3L 2.4L 2.5L S70 99-02 L5 2.3L 2.4L S80 99-10 L5 2.5L L6 2.8L 2.9L V8 4.4L V40 99-16 L4 1.9L 2.0L V70 99-07 L5 2.3L 2.4L 2.5L XC70 03-07 L5 2.5L 03-14 L5 2.5L L6 2.9L V8 4.4L</p>	<table border="1"> <tr><td>WIX</td><td>57021</td></tr> <tr><td>PROTEC</td><td>177</td></tr> <tr><td>FRAM</td><td>CH8712</td></tr> <tr><td>GONHER</td><td>G72</td></tr> <tr><td>MANN</td><td>HU819X</td></tr> <tr><td>INTERFIL</td><td>OF8712</td></tr> <tr><td>ALTURA</td><td>80mm</td></tr> <tr><td>D.EXTERNO</td><td>73mm</td></tr> <tr><td>D.INTERNO</td><td>28mm</td></tr> </table>	WIX	57021	PROTEC	177	FRAM	CH8712	GONHER	G72	MANN	HU819X	INTERFIL	OF8712	ALTURA	80mm	D.EXTERNO	73mm	D.INTERNO	28mm
WIX	57021																			
PROTEC	177																			
FRAM	CH8712																			
GONHER	G72																			
MANN	HU819X																			
INTERFIL	OF8712																			
ALTURA	80mm																			
D.EXTERNO	73mm																			
D.INTERNO	28mm																			
	<p>S60 11-16 L6 3.0L S80 07-15 L6 3.0L 3.2L V60 15-16 L6 3.0L V70 08-10 L6 3.2L XC60 10-16 L6 3.0L 3.2L XC70 08-16 L6 3.0L 3.2L XC90 07-14 L6 3.2L</p>	<table border="1"> <tr><td>WIX</td><td>57806</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td>CH10415</td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td>HU925/4Y</td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>102mm</td></tr> <tr><td>D.EXTERNO</td><td>83mm</td></tr> <tr><td>D.INTERNO</td><td>43mm</td></tr> </table>	WIX	57806	PROTEC		FRAM	CH10415	GONHER		MANN	HU925/4Y	INTERFIL		ALTURA	102mm	D.EXTERNO	83mm	D.INTERNO	43mm
WIX	57806																			
PROTEC																				
FRAM	CH10415																			
GONHER																				
MANN	HU925/4Y																			
INTERFIL																				
ALTURA	102mm																			
D.EXTERNO	83mm																			
D.INTERNO	43mm																			
	<p>S60 S80 S90 V60 V90 XC40 XC60 (15-20) L4 2.0L</p>	<table border="1"> <tr><td>WIX</td><td>WL10241</td></tr> <tr><td>PROTEC</td><td></td></tr> <tr><td>FRAM</td><td></td></tr> <tr><td>GONHER</td><td></td></tr> <tr><td>MANN</td><td></td></tr> <tr><td>INTERFIL</td><td></td></tr> <tr><td>ALTURA</td><td>105mm</td></tr> <tr><td>D.EXTERNO</td><td>73mm 82mm</td></tr> <tr><td>D.INTERNO</td><td>24mm 13mm</td></tr> </table>	WIX	WL10241	PROTEC		FRAM		GONHER		MANN		INTERFIL		ALTURA	105mm	D.EXTERNO	73mm 82mm	D.INTERNO	24mm 13mm
WIX	WL10241																			
PROTEC																				
FRAM																				
GONHER																				
MANN																				
INTERFIL																				
ALTURA	105mm																			
D.EXTERNO	73mm 82mm																			
D.INTERNO	24mm 13mm																			